

Operating Manual ACTUSMART CM, control unit version 1.2



Contents

Contents	2
Operating Manual ACTUSMART CM.V1.2	4
1 Introduction/Notes	4
2 General	4
2.1 Overview	4
2.2 Serial number and type label	4
2.3 Operating mode	5
2.4 Protection class	5
2.5 Mounting position	5
2.6 Direction of rotation	5
2.7 Protection devices	6
2.7.1 Torque	6
2.7.2 Motor temperature	6
2.7.3 Input fuse, thermal fuse	6
2.8 Ambient temperature	6
2.9 Delivery condition of the actuators	7
2.10 Information notice (tag)	7
3 Packaging, transport and storage	7
3.1 General	8
3.2 Storage	8
3.3 Long-term storage	8
4 Installation instructions	9
4.1 Mechanical connection	9
4.2 Mounting position of the operating unit	10
4.3 Electrical connection	10
4.3.1 Power supply connection	11
5 Commissioning	12
5.1 General	12
5.2 Manual operation	12
5.3 Mechanical default settings, preparation	12
5.4 End limit setting	12
5.4.1 End limit OPEN	12
5.4.2 End limit CLOSE	15
5.5 Final works	15
6 Control Unit	15
6.1 Operating unit	15
6.2 Display elements	16
6.2.1 Graphic display	16
6.2.2 LED Display	17
6.3 Operation	18
6.3.1 Operation mode	18
6.3.2 Configuration	19
6.3.3 Configuration example	20
6.3.4 „TEACHIN“	21
7 Parameter menu	22
7.1 Parameter group: End limit	22
7.2 Parameter group: Torque	24
7.3 Parameter group: Speed	24
7.4 Parameter group: Ramp (optional)	25
7.5 Parameter group: Control	25
7.6 Parameter group: Password	25
7.7 Parameter group: Position	25
7.8 Parameter group: Binary inputs	26
7.9 Parameter group: Binary outputs	28
7.10 Parameter group: Position output (optional)	30
7.11 Parameter group: Step mode	31
7.12 Parameter group: Positioner (optional)	32
7.13 Parameter group: PID controller (optional)	34
7.14 Parameter group: Bus systems (optional)	35

7.15	Parameter group: Characteristic curves (optional)	36
7.15.1	Torque characteristic	36
7.15.2	Speed characteristic	37
7.15.3	Valve characteristic	37
7.16	Parameter group: Identification (optional)	38
7.17	Parameter group: System parameters (locked)	38
7.18	Parameter group: Miscellaneous	38
8	Status area	39
8.1	Status	39
8.1.1	Status – binary outputs	39
8.1.2	Status – binary inputs	40
8.1.3	Status – analog values	40
8.1.4	Status – absolute values.	40
8.1.5	Status – firmware	41
8.1.6	Status – serial number	41
8.1.7	Status – meter readings	42
8.2	History	42
9	Infrared connection	42
10	Bluetooth connection	43
11	Maintenance	43
12	Troubleshooting	44
12.1	Error list	44
13	Fuses	46
14	Spare parts	46
15	Lubricant recommendation, lubricant requirements	46
15.1	Main body: -25 to +60°C	47
15.2	Main body: -40 to +60°C	47
15.3	Output type A and spindle drives (linear actuators) -40 to +60°C	47
15.4	Basic lubricant service interval	47
16	Training.	48
17	Original Declaration of Incorporation of Partly Completed Machinery	49
18	Declaration of Conformity	50
19	Declaration of Conformity	51
20	Technical data	52
20.1	Binary outputs	52
20.2	Binary inputs	52
20.3	Analog inputs.	54
20.4	Analog output	54
20.5	Auxiliary voltage input and output.	55
20.6	Connections	55
20.6.1	Connections for non explosion-proof version.	55
20.6.2	Connections for explosion-proof version.	55
20.7	Miscellaneous	56
21	Technical data CM03.	56
21.1	Standard version CM03	56
21.2	24 VDC version CM03	56
21.3	400 V version CM03	56
22	Technical data CM06.	56
22.1	Standard version CM06	57
22.2	400V version CM06	57
Spare parts ACTUSMART CM03.V1.2		58
1	Standard version	58
2	Explosion-proof version	59

Operating Manual ACTUSMART CM.V1.2

1 Introduction/Notes

These operating instructions apply to SCHIEBEL actuators of the ACTUSMART CM series.

The scope of application covers the operation of industrial valves, e.g., globe valves, gate valves, butterfly valves and ball valves. For other applications please consult with the factory.

The manufacturer shall not be liable for incorrect use and possible damage arising thereof. The risk shall be borne solely by the user.

Using the unit as intended also entails the observance of these operating instructions!



When operating electrical equipment, certain parts inevitably carry hazardous voltage levels. Work on the electrical system or equipment must be carried out only in accordance with electrical regulations by a qualified electrician himself or by specially instructed personnel under the control and supervision of a qualified electrician.

Maintenance instructions must be observed as otherwise the safe operation of the actuator cannot be guaranteed.

Failure to follow the warning information may result in serious bodily injury or property damage. Qualified personnel must be thoroughly familiar with all warnings contained in this operating manual.

Proper transport, storage, installation, assembly and careful commissioning are essential to proper and safe operation.

When working in potentially explosive areas, observe the European Standards EN 60079-14 "Electrical Installations in Hazardous Areas" and EN 60079-17 "Inspection and Maintenance of Electrical Installations in Hazardous Areas".



Maintenance work on open actuators may only be conducted if these are de-energized. Reconnection during maintenance is strictly prohibited.



2 General

The actuator of the ACTUSMART CM series is a compact rotary actuator with integrated controller for valve operation. The integral multi-turn sensor allows setting the travel up to 105 revolutions without opening the housing.

2.1 Overview

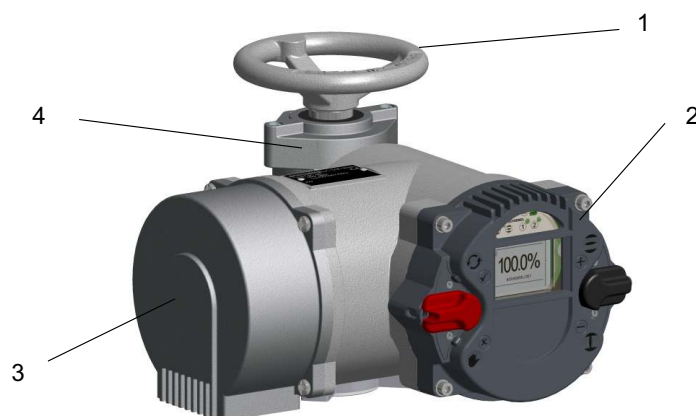


Figure 1: 1... Handwheel, 2... Control unit (operating unit), 3... Connection compartment 4... Gear component

2.2 Serial number and type label

Each actuator of the ACTUSMART CM series carries a serial number. The serial number is a 10-digit number that begins with the year and that can be read from the type label (see Figure 2) of the actuator (the type label is located next to the handwheel – see Figure 3).

Using this serial number, SCHIEBEL can uniquely identify the actuator (type, size, design, options, technical data and test report).

Type: CM06.V1.2 E
 No.: 20114 00885
 Close: 16,0-64Nm (64Nm)
 Open: 16,0-64Nm (64Nm)
 300revs. 300-7200sec
 2,5-60rpm IP67
 I_N: 2,85A/230VAC
 1x110V-240V ±10% AC/DC



Josef Benc Gasse 4, 1230 Vienna, Austria 200352/3



Figure 2: Type label

Figure 3: 1... Type label

Actuators which are suitable for operation in explosive atmosphere (see EU Directive 94/9/EG and EN 60079-0 Standard) are separately designated by a special type label (EEx, TÜV Standard, Figure 4).

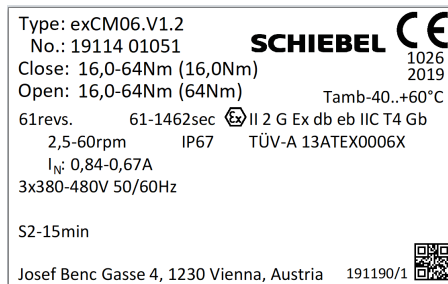


Figure 4: Type label of the actuator for operation in explosive atmosphere

2.3 Operating mode

ACTUSMART CM actuators are suitable for open-loop control (S2 operating mode – on/off duty) and closed-loop control (S4 operating mode – modulating duty) according to EN 60034-1.

2.4 Protection class

ACTUSMART CM actuators come by default with IP 67 (EN 50629) protection.

CAUTION: The protection class specified on the type label is only effective when the cable glands also provide the required protection class, the cover of the connection compartment is carefully screwed closed, and the mounting position (see section 2.5, page 5) is observed.



We recommend metallic screwed cable glands with a metrical thread. Furthermore, cable inlets that are not needed must be closed with screw plugs. On explosion-proof actuators, cable glands with protection class **EEx e acc. EN 60079-7** must be used. **After removing covers** for assembly purposes or adjustment work, take special care upon reassembly so that seals are not damaged and remain properly fastened. Improper assembly may lead to water ingress and to failures of the actuator.



The cover of the control unit – the operating unit (see Figure 1, page 4) – must not be opened!



Allow a certain sag in the connector cables before reaching the screwed cable glands so that water can drip off from the connector cables without running to the screwed cable glands. This way, forces acting on the screwed cable glands are also reduced (see section 2.5).

2.5 Mounting position

Generally, the installation position is irrelevant. However, based on practical experience, it is advisable to consider the following for outdoors use or in splash zones:

- Mount actuators with cable inlet facing downwards.
- Ensure that sufficient cable slack is available.

2.6 Direction of rotation

Unless specifically ordered otherwise, the standard direction is (see Figure 5 and Figure 6):

- **right turning (clockwise) = CLOSING**
- **left turning (counter-clockwise) = OPENING**

Clockwise rotation of the actuator is given when the output shaft turns counter clockwise when looking at the output shaft.

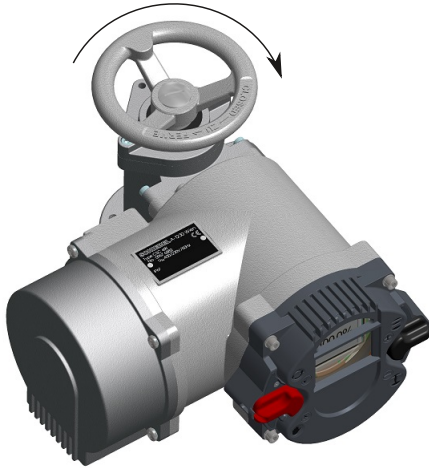


Figure 5: clockwise = close

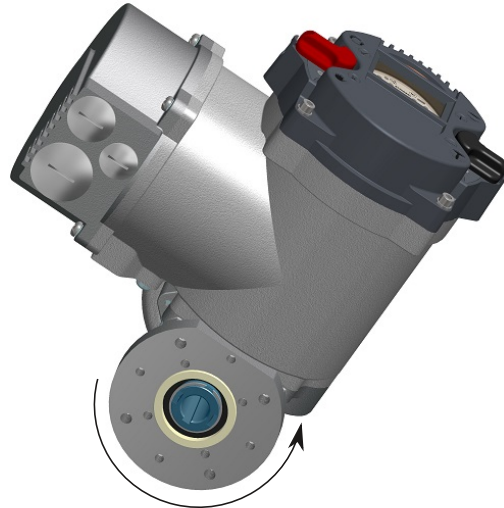


Figure 6: counter-clockwise = close

CAUTION: All specifications in this operating manual refer to the standard direction of rotation.



2.7 Protection devices

2.7.1 Torque

ACTUSMART actuators provide electronic torque monitoring.

The switch-off torque can be modified in the controller menu for each direction separately. By default, switch-off torque is set to the ordered value. If no torque was specified with the order, the actuator is supplied from the factory with the maximum configurable torque.

For more information, see section 7.2, page 24.

2.7.2 Motor temperature

All ACTUSMART CM actuators are normally equipped with motor winding temperature sensors, which protect the motor against excessive winding temperature.

The display will show the corresponding error upon exceeding the permissible motor temperature (see section 12.1, page 44).

2.7.3 Input fuse, thermal fuse

The frequency inverter is protected by an input fuse and the explosion-proof version also has a thermal fuse. If one of these fuses releases, a serious defect occurs and the frequency inverter will be disconnected permanent from the power supply. Then the frequency inverter must be changed.

2.8 Ambient temperature

Unless otherwise specified upon ordering, the following operating temperatures apply:

- On/off duty (open-loop control) -25 ... +60°C
- Modulating duty (closed-loop control) -25 ... +60°C
- explosion-proof version -20 ... +40°C (acc. EN 60079-0)
- explosion-proof version with extended temperature range -40 ... +60°C

CAUTION: The maximum operating temperature can also depend on further order-specific components. Please refer to the technical data sheets to confirm the as-delivered product specifications.



2.9 Delivery condition of the actuators

For each actuator, an inspection report is generated upon final inspection. In particular, this comprises a full visual inspection, calibration of the torque measurement in connection with an extensive run examination and a functional test of the micro controllers.

These inspections are conducted and documented according to the quality system and can be made available if necessary. The basic setting of the end position must be performed after assembly on the actuator.

CAUTION: Commissioning instructions (see section 5, page 12) must be strictly observed!

During assembly of the supplied valves at the factory, end positions are set and documented by attaching a label (see Figure 7). During commissioning at the plant, these settings must be verified.

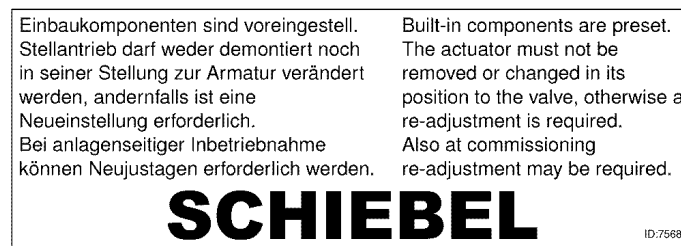


Figure 7: Label

2.10 Information notice (tag)

Each actuator is provided with a bilingual tag containing key information, which is attached to the handwheel after final inspection. This tag also shows the internal commission registration number (see Figure 8, page 7).

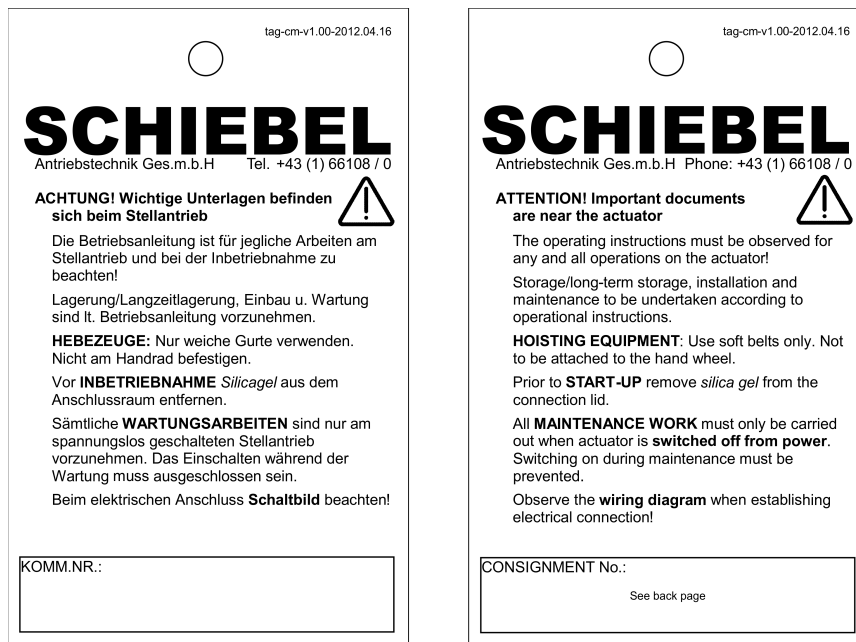


Figure 8: Tag

3 Packaging, transport and storage

Depending on the order, actuators may be delivered packed or unpacked. Special packaging requirements must be specified when ordering. Please use extreme care when removing or repackaging equipment

CAUTION: Use soft straps to hoist the equipment; do not attach straps to the handwheel. If the actuator is mounted on a valve, attach the hoist to the valve and not to the actuator.



3.1 General

The connection compartment of ACTUSMART CM actuators contains 5 g of factory supplied silica gel.

CAUTION: Please remove the silica gel before commissioning the actuator (see section 5, page 12).



3.2 Storage

CAUTION: Please observe the following measures to avoid damage during the storage of actuators:

- Store actuators in well-ventilated, dry premises.
- Protect against floor dampness by storing actuators on wooden grating, pallets, mesh boxes or shelves.
- Protect the actuators against dust and dirt with plastic foil.
- Actuators must be protected against mechanical damage.
- The storage temperature must be between -20°C and +40°C.

It is not necessary to open the controller of the actuator for servicing batteries or similar operations.

3.3 Long-term storage

CAUTION: If you intend to store the actuator for more than 6 months, additionally follow the instructions below:



- **CAUTION:** The silica gel in the connection compartment must be replaced after 6 months of storage (from date of delivery from SCHIEBEL's factory in Vienna).
- After replacing the silica gel, brush the connection cover seal with glycerine. Then, carefully close the connection compartment again.
- Coat screw heads and bare spots with neutral grease or long-term corrosion protection.
- Renovate damaged paintwork arising from transport, improper storage, or mechanical influences.

CAUTION: For explosion-proof actuators, it is not allowed to extensively overpaint the actuator. According to the standard, in order to avoid electrostatic charge, the maximal thickness of the varnish is limited to 200 µm.



- Every 6 months, all measures and precautions for long-term storage must be checked for effectiveness, and corrosion protection and silica gel must be renewed.
- Failure to follow the above instructions may lead to condensation which can damage the actuator.



4 Installation instructions



Figure 9: 1... mounting flange, 2... bore pattern G0/F10, 3... centring ring, 4... bore pattern F07, 5... shaft connection, 6... ground connection

Installation work of any kind on the actuator may only be performed by qualified personnel.

4.1 Mechanical connection

see Figure 9, page 9

Check whether the valve flange, actuator flange and valve shaft correspond to the shaft connector of the actuator. For output type "Am" (threaded bushing with bore), check whether the thread of the valve matches the thread of the actuator. In general, proceed as follows:

- Clean the bare parts of the actuator uncoated with corrosion protection.
- Thoroughly clean the screw mounting surfaces of the valve.
- In the actuator, appropriately lubricate the output shaft and the valve of the driven shaft.
- In the "Am" version, ensure that the valve bushing is amply lubricated.
- Attach the actuator to the valve or gearbox.
- Tighten fastening screws (torque according to table below).
- By means of the handwheel, check the ease of movement of the actuator-valve connection.

Thread	Tightening [Nm] for screws with strength class	
	8.8	A2-70 / A4-70
M6	11	8
M8	25	18
M10	51	36
M12	87	61
M16	214	150
M20	431	294
M30	1489	564

For output type A (unbored threaded bushing), you must sufficiently lubricate both needle bearings in the output form after processing and cleaning the spindle nut.

For this purpose, use the optional SCHIEBEL grease lubricant or a grease lubricant according to our recommendation (see section 15.3, page 47).

4.2 Mounting position of the operating unit

The mounting position of the operating unit can be rotated in 90° steps.

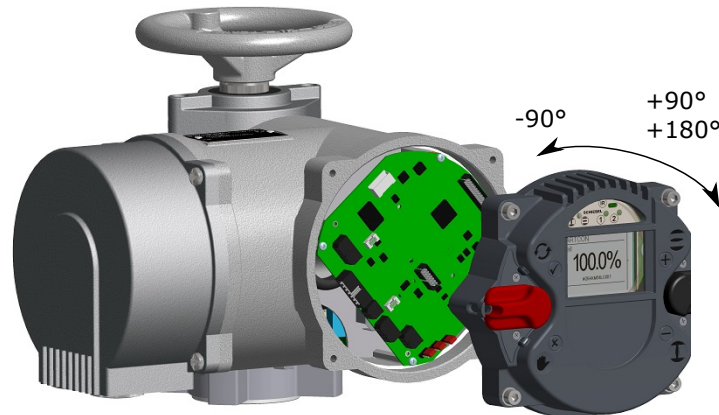


Figure 10

- Disconnect the actuator and control system from the power supply.
- To prevent damage to the electronic components, both the control system and the person have to be earthed!
- Unscrew the bolts for the interface surface and carefully remove the service cover.
- Turn service cover to new position and put back on.
 - Ensure correct position of the O-ring.
 - Turn service cover by max. of 180°.
 - Put service cover on carefully so that no cables get wedged in.
- Screw the bolts shut evenly in a crosswise sequence. **IMPORTANT:** max. torque 5 Nm



4.3 Electrical connection

Electrical connections may only be carried out by qualified personnel. Please observe all relevant national security requirements, guidelines, and regulations. The equipment should be de-energized before working on electrical connections. Furthermore, confirm the absence of electrostatic discharges during the connection. First of all, connect the ground screw.



The line and short circuit protection must be done on the system side. The ability to unlock the actuator for maintenance purposes must be provided. For the dimensioning, the rated current is to be used (see Technical Data).



Check whether the power supply (voltage, frequency) is consistent with the connection data (see type label – Figure 2, page 5). The connection of electrical wiring must follow the circuit diagram. This can be found in the appendix of the documentation. The circuit diagram can be ordered from SCHIEBEL by specifying the serial number. When using options, such as a Profibus connection, the relevant guidelines must be followed.



4.3.1 Power supply connection

ACTUSMART CM actuators feature an integrated motor controller, i.e. only a connection to the power supply is required. In **non explosion-proof actuators**, the wiring uses a connector independent from control signals (see Figure 11, page 11).

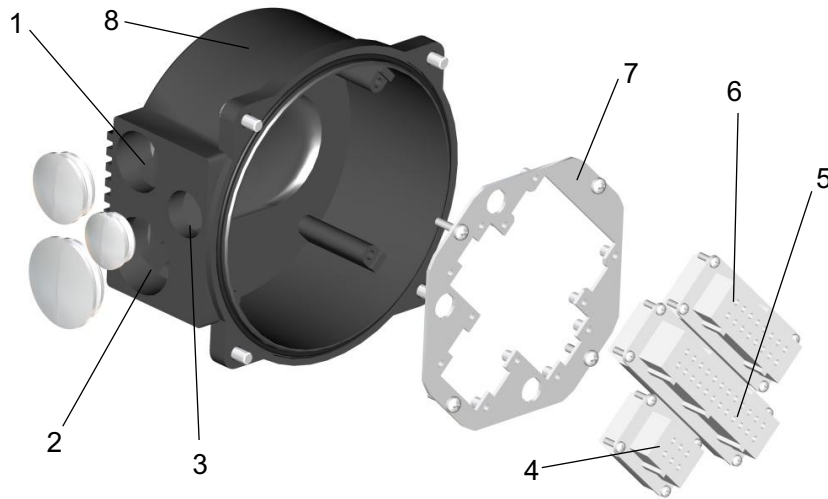


Figure 11: 1... Metric screw M32x1,5, 2... M40x1,5, 3... M25x1,5, 4... Plug insert Han6E (for power supply), 5... Plug insert Han24E (for control cables), 6... Connector for options, 7... Connector plate, 8... Connecting housing

The connection on **explosion-proof actuators** or, on special request also on non explosion-proof actuators) will be made via terminals (see Figure 12).

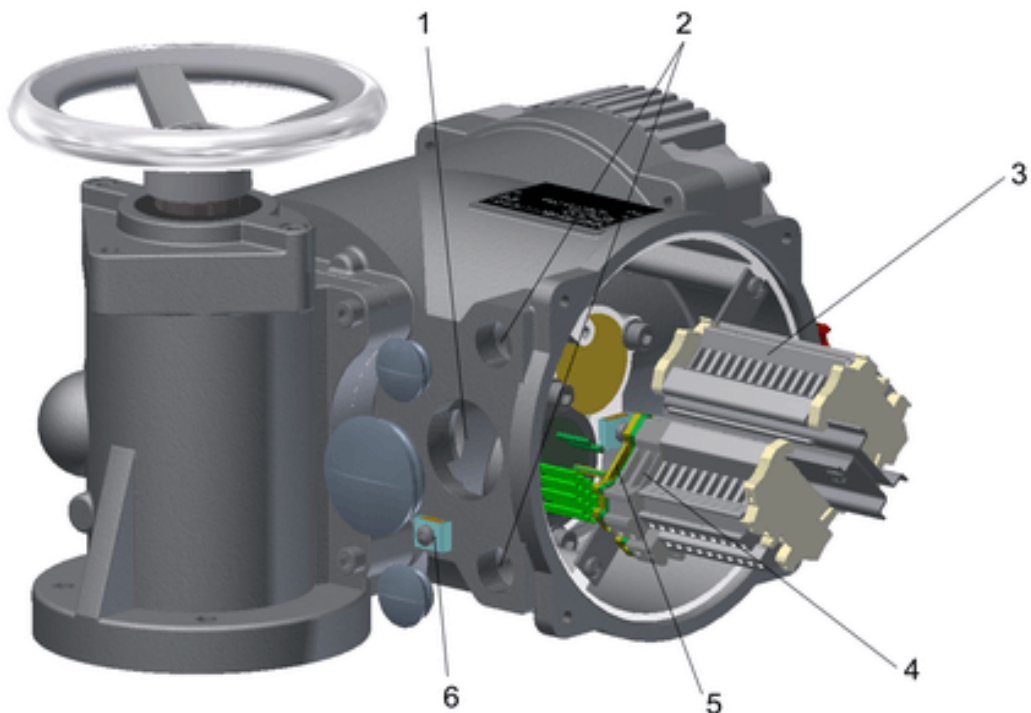


Figure 12: Terminal box: 1... Metric screw M40x1,5, 2... 2 pcs. M20x1,5, 3... Terminals for the control signals, 4... Terminals for the power supply, 5... Terminal for ground connection, 6... Outside ground connection

If, during outdoor installation, commissioning is not carried out immediately after electrical connection, the power supply must be connected at a minimum to achieve a heating effect. In this case, the silica gel may remain in the connection compartment until commissioning.

CAUTION: see section 3.3, page 8



5 Commissioning

Before commissioning, ensure that the actuator is correctly assembled and electrically connected (see section 4, page 9).

CAUTION: Remove silica gel from the connection compartment.

5.1 General

CAUTION: During commissioning and after every disassembly of the actuator, the electric end positions (see section 5.4, page 12) must be reset.



5.2 Manual operation

The use of a differential gearbox in the handwheel assembly makes mechanical switching unnecessary during manual operation.

CAUTION: Manual operation with mechanical or electromechanical equipment (such as: lever, drilling machine, etc.) is NOT ALLOWED, as this may damage the product.



5.3 Mechanical default settings, preparation

The use of multi-turn sensors makes mechanical settings unnecessary.

CAUTION: Before the motorised operation of the valve, it is essential to check and eventually adjust torque settings.



5.4 End limit setting

A detailed description of the operation of the ACTUSMART CM controller can be found in section 6.3, page 18.

5.4.1 End limit OPEN

Set the selector switch and control switch to the center position.

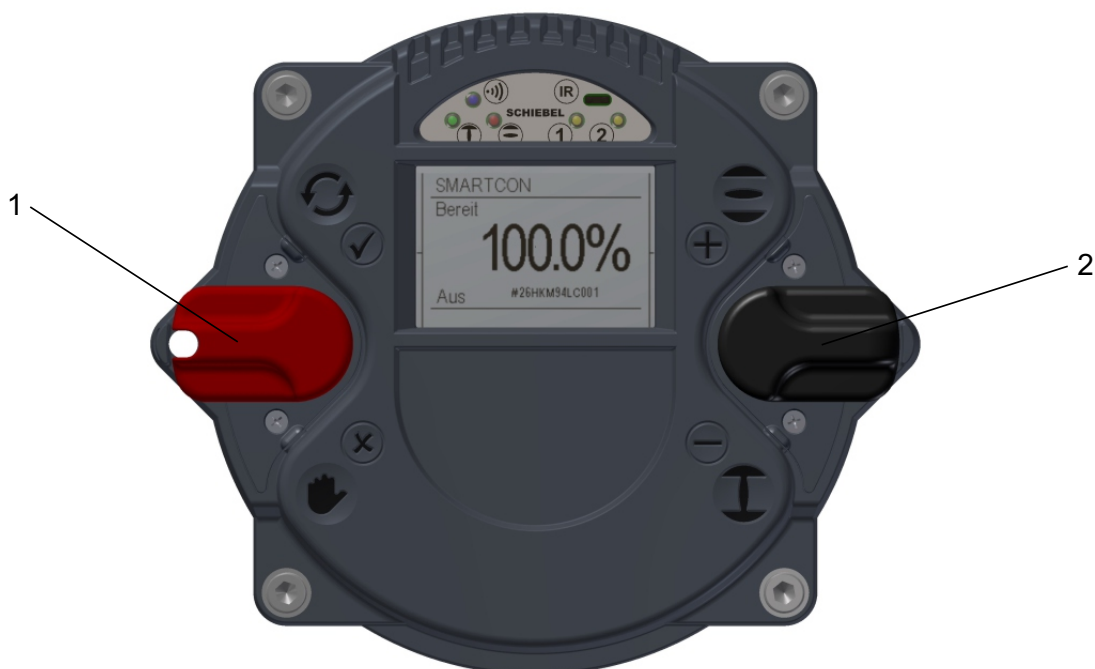


Figure 13: 1... Selector switch (red), 2... Control switch (black)

Scroll through the menu with the control switch. Move the control switch towards the first menu item \ominus "P 1.1 End limit – Open".

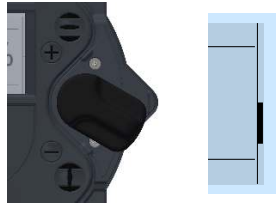


Figure 14

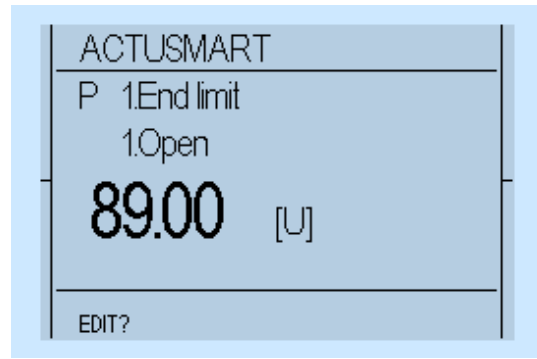


Figure 15

Afterwards, flip up the selector switch slightly and let it snap back to its neutral position ☑.

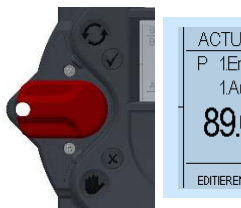


Figure 16

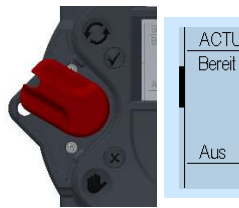


Figure 17



Figure 18

This changes the bottom line of the display from "EDIT?" to "SAVE?"

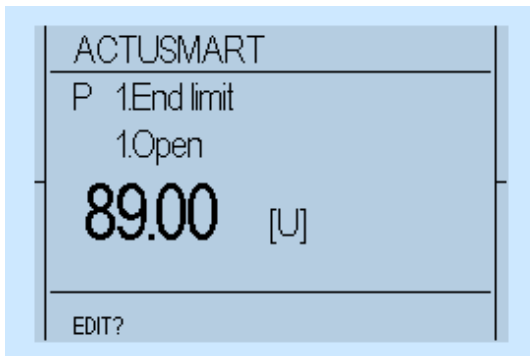


Figure 19

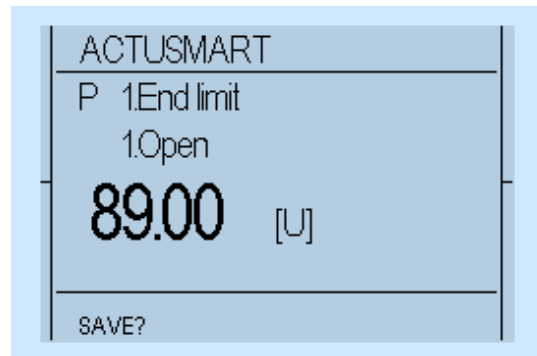


Figure 20

Then, push down the selector switch until it snaps into place. In doing so, the bottom right now on the display will show "TEACHIN" ☒

CAUTION: Once the display shows "TEACHIN", use the operating switch (black switch) to start the motorised operation of the actuator. In this mode, no travel-dependent switch off occurs in the end position.



CAUTION: Please note that, during motor operation, only torque monitoring remains active, as travel adjustment will happen subsequently. Therefore, please check beforehand whether the maximum torque has been already parameterised.



Absolute and relative values on the display will change continuously along with position changes.



Figure 21

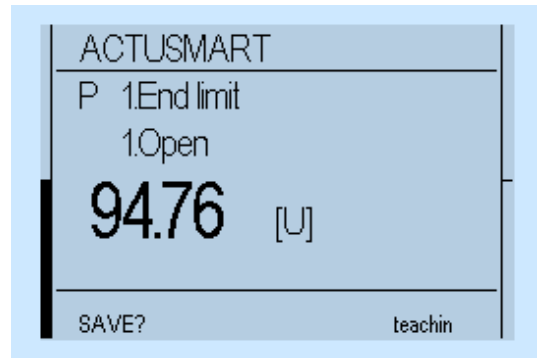


Figure 22

Manually move the actuator with the handwheel (see section 2.1, page 4, or section 2.6, page 5) or by motor via the operating switch (black switch) to the end position OPEN of the valve.

- Absolute value: Absolute value of the position feedback
- Relative value: The value to the other end position

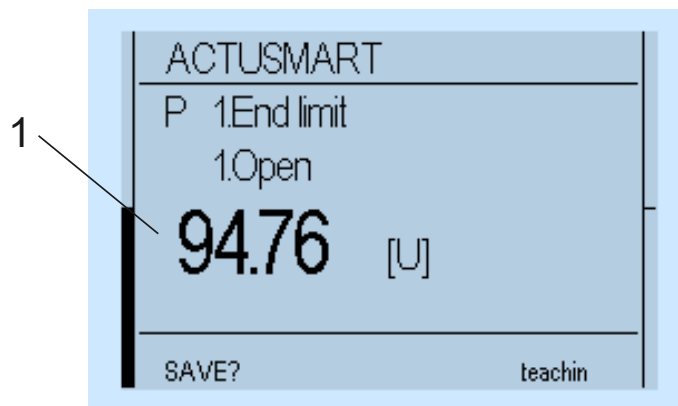


Figure 23: 1... Absolute value, 2... Relative value

When the desired end position OPEN of the valve is reached, move the selector switch back to the middle position. Thus, the line "TEACHIN" disappears.

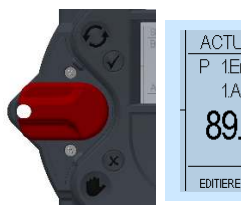


Figure 24

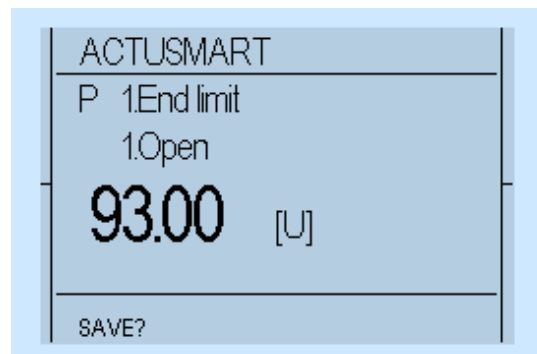



Figure 25

In order to confirm the end position (save), slightly flip up the selector switch towards  and let it snap back to its neutral position.

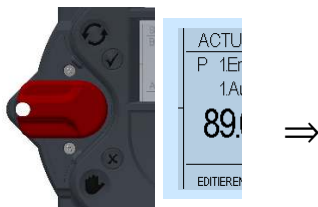


Figure 26

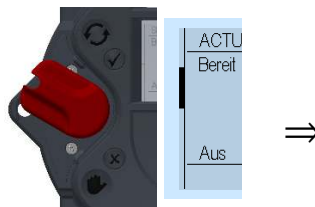


Figure 27

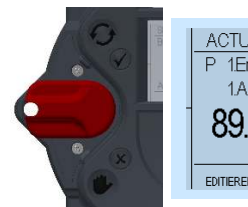


Figure 28

This changes the bottom line of the display for "SAVE?" to "EDIT?" and the end position is stored.

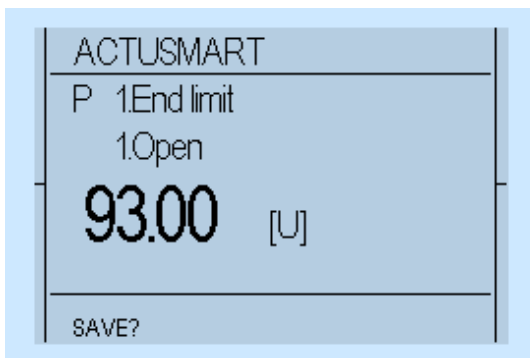


Figure 29

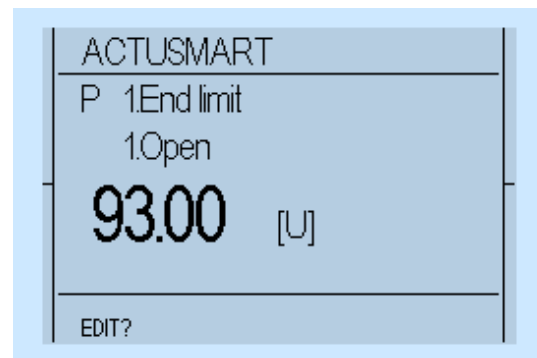


Figure 30

5.4.2 End limit CLOSE

Use menu item "P 1.2 End limit - End limit CLOSE" as for End limit OPEN

5.5 Final works

Following commissioning, check for proper sealing the covers to be closed and cable inlets (see section 2.4, page 5). Check actuator for paint damage (by transport or installation) and repair if necessary.

6 Control Unit

The controller is intended to monitor and control the actuator and provides the interface between the operator, the control system and the actuator.

6.1 Operating unit

Operation relies on two switches: the control switch and a padlock-protected selector switch. Information visualization is provided by 4 integrated indicator lights, as well as the graphic display. For better visibility, switch symbols (✓, ✗, ⊕, ⊖) are on the cover

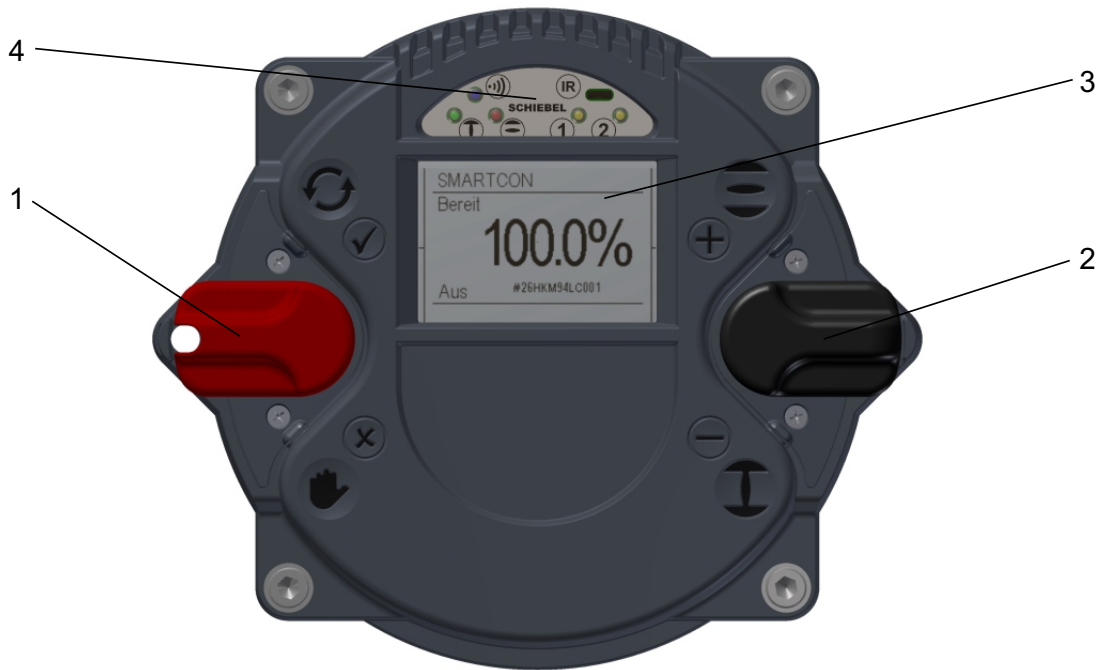


Figure 31: 1... Selector switch, 2... Control switch, 3... Graphic display, 4... LED display

The controller switches serve on the one hand for electric-motor operation of the actuator and, on the other hand, to configure and view various menu items.

The controller cover may be wiped clean with a damp cloth.

The mounting position of the control unit can be turned in 90° steps (see section 4.2, page 10).

6.2 Display elements

6.2.1 Graphic display

The graphic display used in the controller allows text display in different languages.

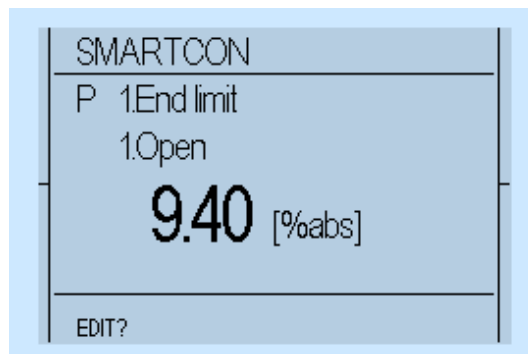


Figure 32

During operation, the displays shows the position of the actuator as a percentage, operation mode and status. When using the option "identification", a customer-specific label is shown at the bottom of the display (e.g., PPS Number).

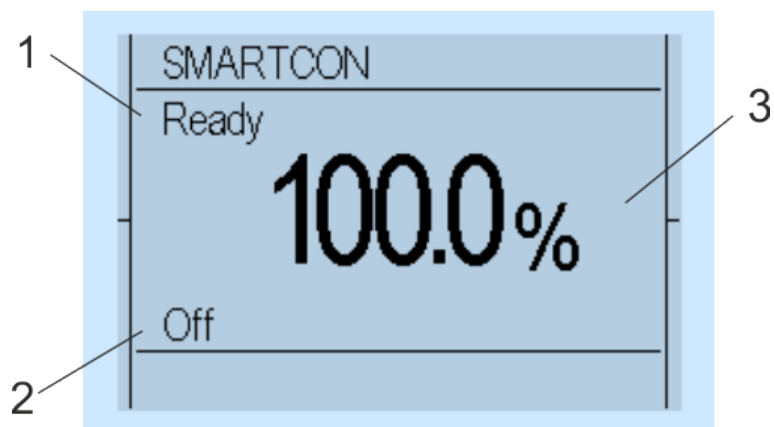


Figure 33: 1... Status, 2... Operation mode, 3... Position

6.2.2 LED Display

To provide users with better status information, basic status data is displayed using 4-colour LEDs. As the device powers up, it undertakes a self-test whereby all 4 LEDs briefly lit up simultaneously.

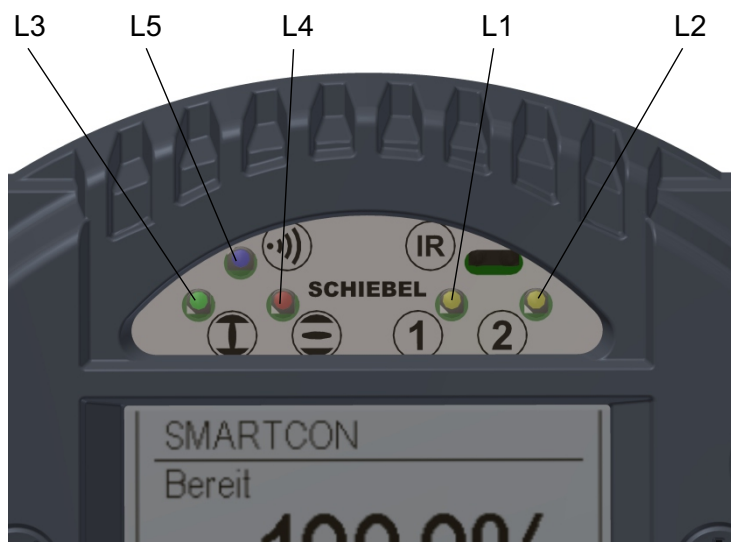


Figure 34

Description	Colour	Lits up	Flashes quickly	Flashes slowly	Does not light up
L1	Yellow	No torque error	Torque fault	—	¹⁾
L2	Yellow	Ready (operational readiness)	Travel fault (no operational readiness!)	—	Error (no operational readiness) motor temperature, supply voltage absent, internal error ¹⁾
L3	Green ²⁾	CLOSE ³⁾	Moving to CLOSE position	Applies upon torque-dependent closing: Occurs when the end position CLOSE is reached but the cut-out torque has not yet been reached	Actuator is not in the CLOSE position.
L4	Red ²⁾	OPEN ³⁾	Moving to OPEN position	Applies upon torque-dependent opening: Occurs when the end position OPEN is reached but the cut-out torque has not yet been reached	Actuator is not in the OPEN position.
L5	Blue	Bluetooth connected	Bluetooth data transmission	Bluetooth ON, not connected	Bluetooth/Infrared OFF
	Red	Infrared connected	Infrared data transmission	Infrared ON, not connected	

6.3 Operation

The actuator is operated via the switches located on the controller (selection- and control switch). All actuator settings can be entered with these switches. Furthermore, configuration is also possible via the IR interface or the Bluetooth Interface (see section 9, page 42). Flip the switch up or down to regulate the parameter menu scrolling speed.

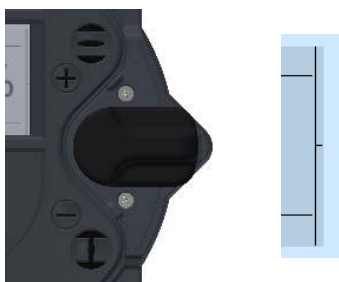


Figure 35: Neutral position

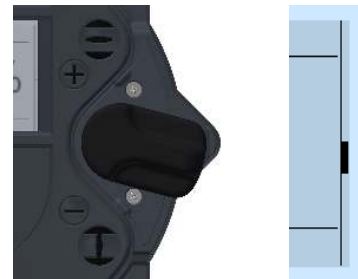


Figure 36: Slight switch flip (it will move to the next parameter)

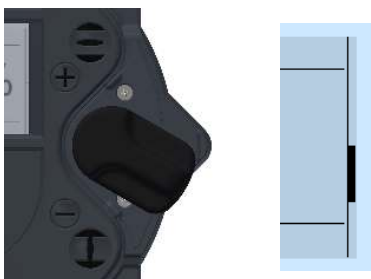


Figure 37: halfway switch flip (it will jump to the next parameter category)

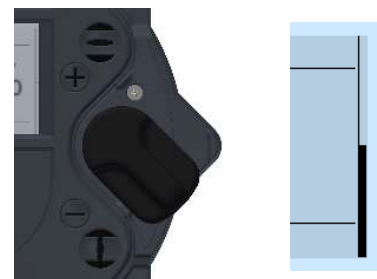


Figure 38: Full switch flip (it will jump to the end of the menu)

6.3.1 Operation mode

Use the selector switch (red) to determine the various operating states of the actuator. In each of these positions, it is possible to block the switch by means of a padlock and thus protect the actuator against unauthorized access.

¹⁾ LED L1 and L2 are turned off as long as an infrared connection is active.

²⁾ Colour of LED L3 and L4 can be changed by parameter P1.7 - see section 7.1, page 22.

³⁾ A travel fault is indicated by a lit L3 and L4

The selector switch has the following positions:

OFF	The actuator can be neither operated via the remote control nor via the control switches of the controller.
Local	It is possible to operate the actuator by motor via the control switch. Control via the remote inputs may be possible with appropriate configuration (superimposed control commands, emergency commands)
Remote	The actuator is ready to process control commands via input signals. The control switch for the motor operation of the actuator is not enabled.

Besides defining the operational status, the selector switch is used in configuration mode to confirm or cancel parameter inputs.

Depending on the selector switch position, the control switch performs different functions:

Selector switch in the OFF position:	The control switch is used to scroll up or down the menu according to internal symbolism. From the neutral position towards \oplus you reach the status and history data areas. Towards the \ominus symbols you reach the parameter menu. Here, the selection switch either confirms \checkmark or rejects \otimes the current input according to associated symbolism.
Selector switch in the REMOTE position	The control switch gives you access to status, history data and parameter area.
Selector switch in the LOCAL position	With the control switch, the actuator can be operated by motor. You may also operate the actuator in inching and self-hold mode. Switches are spring-loaded to snap back automatically into their neutral position. (To confirm a control command, the control switch must be pushed all the way into its mechanical locking position.)

6.3.2 Configuration

In principle, all parameters are shown as numbers in the corresponding parameter point. From the actuator menu, use the control switch to access different menu points. The lower left corner of the display shows the "EDIT" option.

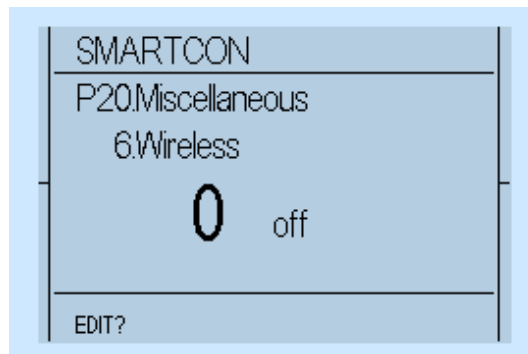


Figure 39

Confirm the selector switch (with a slight flip towards \checkmark , (see Figure 26, page 15 to Figure 28, page 15) to change the selected parameter. To confirm this input readiness, the display changes from "EDIT" to "SAVE".

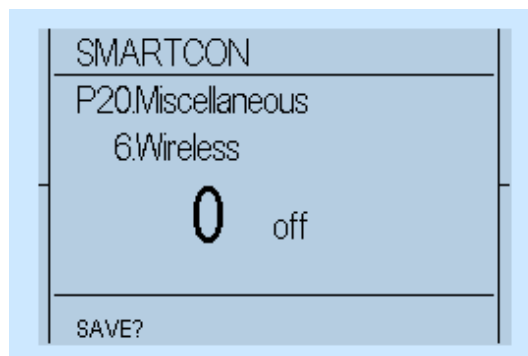



Figure 40

Use the control switch towards to the characters to change the parameter. \oplus or \ominus (see Figure 35 til Figure 38, page 18)

After reaching the desired parameter value, confirm the value with the selector switch (again, flip it slightly towards , (see Figure 26, page 15 til Figure 28, page 15).


6.3.3 Configuration example

By way of example, we will change parameter P20.6 (wireless) from 0 (wireless off) to 2 (Bluetooth communication on). Thus, the Bluetooth connection is activated for a short time and then deactivated again automatically:

The operating and control switch must be in the neutral position



Figure 41: 1... Selector switch (red) , 2... Control switch (black)

Now, move the control switch down (towards ) until the menu item "P 20.6 Miscellaneous - Wireless" is displayed.

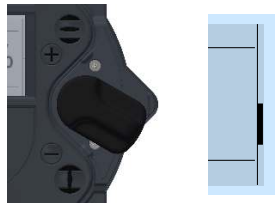


Figure 42

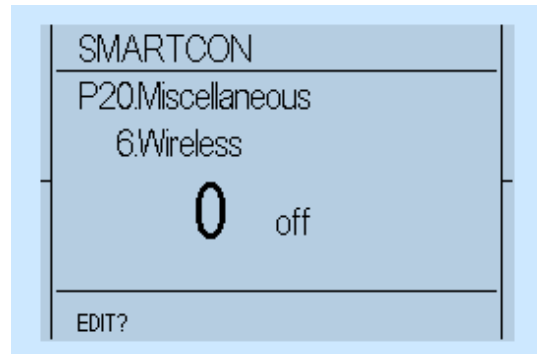


Figure 43

Afterwards, flip up slightly the selector switch (towards ) and let it snap back to its neutral position

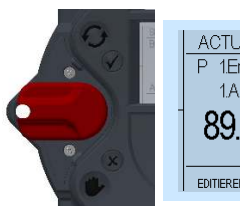


Figure 44

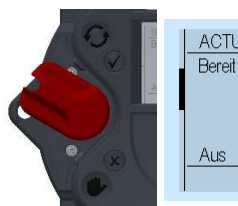


Figure 45



Figure 46

This changes the bottom line of the display from "EDIT?" to "SAVE?"

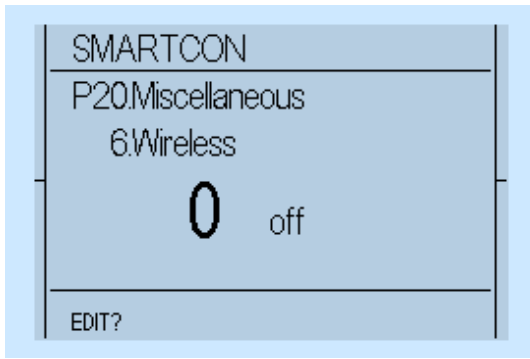


Figure 47

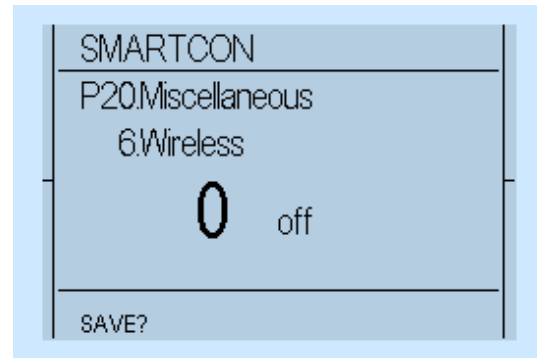


Figure 48

Thereafter, flip up the control switch (toward) to change the value from 0 (off) to 2 (Bluetooth)



Figure 49

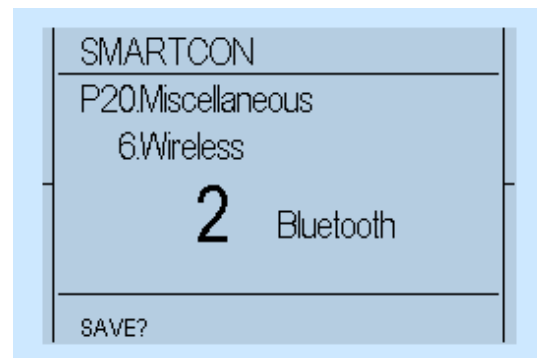


Figure 50

If the value changes to 1, confirm the selection by flipping halfway up the selector switch (towards) and letting it snap back to its neutral position (see Figure 44 til Figure 46).

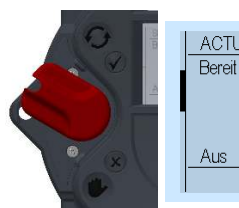


Figure 51

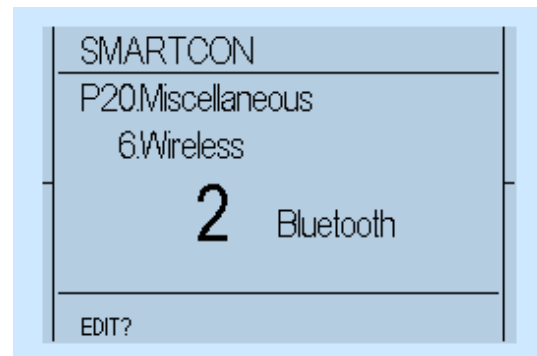


Figure 52

This changes the bottom line of the display from "SAVE?" to "EDIT?" and the parameter is stored.

6.3.4 „TEACHIN“

Furthermore, certain parameters (end positions, intermediate positions).can be set using "TEACHIN". Thus, their configuration is greatly simplified.

After selecting the appropriate menu item (for example: End position) and changing the the input type from "EDIT?" to "SAVE?", move the selector switch (red) to "manual mode" and lock it into place. As you do so, the display will show the message "TEACHIN" and the current position value will be applied continuously to the parameter value. In this mode, further to manual operation by hand wheel, the actuator can be motor-driven with the control switch to the desired position. (see section 22, Figure 22, page 14)

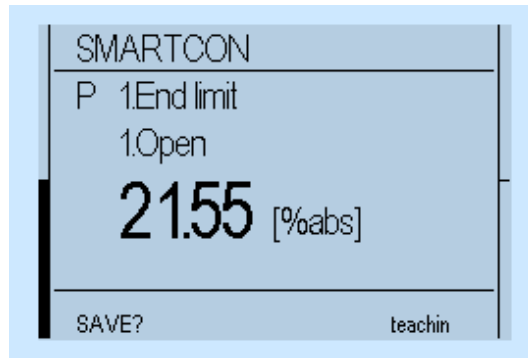


Figure 53

CAUTION: Please note that, during motor operation, only torque monitoring remains active, as travel adjustment will happen subsequently. Therefore, please check beforehand whether the maximum torque has been already set.



After reaching the desired, to-be-defined position, move the selector switch back to the neutral position. Finally, the parameter value must still be saved by flipping the selector switch halfway up and letting it snap back to the neutral position (see Figure 44 til Figure 46, page 20).

7 Parameter menu

For each parameter group, you can find a description, tabular overview of the menu items and possible configurations. The parameter list below also includes all possible options per menu item. Please note that some of the menu items listed and described may not be delivered with your configuration.

7.1 Parameter group: End limit

These parameters are used to configure the end position and switch off behavior of the actuator. In this regards, it is important to ensure that the basic mechanical configuration described in section 5.4, page 12 has already been made.

Ensure that these parameters are set during commissioning before operating the actuator. In addition, the settings in the "Torque" menu (see section 7.2, page 24 must be compared with the permissible values of the valve and corrected as appropriate)



CAUTION: Generally, 100% stands for fully open and 0% for fully closed. Please note that these values cannot be changed. The end position range is reached as soon as 0% or 100% is shown on display.



	Menu item	Sub-menu item	poss. setting	Notes / comments
P1.1	End limit	Open	TEACHIN; 0...100 U ¹⁾	The parameter value can be set using TEACHIN. With a known travel, the second end position can be entered after setting the first end position.
P1.2	End limit	Close	TEACHIN; 0...100 U ¹⁾	The parameter value can be set using TEACHIN. With a known travel, the second end position can be entered after setting the first end position.
P1.3	End limit	Switch-off Open	0: travel	The actuator uses end-position signals to switch off and report the end position. Attention: For failsafe-actuators in failsafe-direction not applicable. End limit by travel in failsafe-position only possible by changing the mechanical connection to the valve.

continued on next page

¹⁾representative for CM03; U...number of revolutions

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / Comments
			1: torque	The actuator signals the end position or stops the motor only after reaching the specified torque in the end position. If the torque is reached and end position signal not, the actuator reports an error. If the end position is reached and the control command drops off during the build-up of the torque, the motor stops and the required torque is not reached. Attention: For failsafe-actuators in failsafe-direction not applicable. Torque/Force in failsafe-position depends on residual spring torque/force
			2: torque1	Like „torque“, but in the end position range, the torque is also increased when the control command drops off during the build-up of the torque, until the required torque is reached. Attention: For failsafe-actuators in failsafe-direction not applicable. Torque/Force in failsafe-position depends on residual spring torque/force
			3: torque2	Like „torque1“, but in the end position range automatically an additional control command is generated to reach and hold the torque. If the torque decrease and the actuator is in the end position it will be restored automatically. e.g.: Changes due to temperature differences, settlement. Attention: For failsafe-actuators in failsafe-direction not applicable. Torque/Force in failsafe-position depends on residual spring torque/force
			4: travel1	Like „travel“, however, the actuator still continues to drive the set Overrun time after reaching the end position, even when the positioning command is released. Only relevant if Overrun time (P1.10, P1.11) is greater than 0. Attention: For failsafe-actuators in failsafe-direction not applicable.
P1.4	End limit	Switch-off Close	1: travel	see P1.3
			1: torque	see P1.3
			2: torque1	see P1.3
			3: torque2	see P1.3
			4: travel1	see P1.3
P1.5	End limit	Closing direction	right (0)	Actuator is designed for clockwise = closing.
			left (1)	Reverse direction of rotation! Counterclockwise = closing. The crossing of all signals and commands is performed by the controller.
P1.6	End limit	Rot. sense pos.	0	Rotation sense of the Potentiometer. No function in ACTUSMART CM series.
			1	
P1.7	End limit	LED function	Close = green (0)	Definition of the LED colour of the CLOSED or OPEN end position signalization.
			Close = red (1)	
P1.8	End limit	End limit hyst.	0.1... 10.0%	Hysteresis range for end position signals: Example: End position hysteresis 1% means that the End position OFF is reached when closing 0%, and will be left when opening only at 1%, i.e., a re-closing can only take place after leaving this hysteresis.
P1.9	End limit	Ramp	0.1... 100%	When approaching the end position, the speed is reduced.
P1.10	End limit	Range	0... 100%	End position range for torque (P1.3, P1.4). Permissible range in which the torque is to be achieved. If the actuator comes to the end of the end position range, the motor shuts off even if the torque has not been reached.

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / Comments
P1.11	End limit	Overrun Open	0... 60 s	Switch-off delay after reaching the end position see travel1 (P1.3, P1.4)
P1.12	End limit	Overrun Close	0... 60 s	Switch-off delay after reaching the end position travel1 (P1.3, P1.4)

CAUTION: When installing the actuator on a gear or a thrust unit, please take into account the limits and factors of the gear / thrust unit at parametrization.



When using end-limit switch-off by torque, the end position limit must be set before reaching the torque limit. Accordingly, the actuator will only signal the final end position if the configured torque and the associated end position are reached. If the end position is not reached, a torque error is reported (see section 6.2.2, page 17).

7.2 Parameter group: Torque

If no torque was specified with the order, the actuator is supplied from the factory with the maximum configurable torque.

	Menu item	Sub-menu item	poss. setting	Notes / comments
P2.1	Torque	Open	8... 32 Nm ²⁾	Switch-off torque in OPEN direction CAUTION: The range can be restricted via menu item P2.3.
P2.2	Torque	Close	8... 32 Nm ²⁾	As P2.1, but in CLOSED direction.
P2.3	Torque	Torque limit	8... 32 Nm ²⁾	Torque to protect the valve, the transmission, or the thrust unit. This value limits the setting of parameters P2.1 and P2.2 to prevent an erroneous increase above the allowed value of these two parameters.
P2.4	Torque	Latching	0: Off	Unassigned in ACTUSMART CM series

When installing the actuator on an additional gear, please take into account the corresponding values of the gear / thrust unit as you enter the actuator parameters. To achieve an effective output torque (incl. gear) / output power (including thrust unit) ratio, the factor gear/thrust unit must be considered.



7.3 Parameter group: Speed

	Menu item	Sub-menu item	Poss. setting ²⁾	Notes / comments
P4.1	Speed	Local Open	2.5... 72.2 rpm	Output speed for local operation in direction OPEN.
P4.2	Speed	Local Close	2.5... 72.2 rpm	As P4.1, but in direction CLOSE.
P4.3	Speed	Remote Open	2.5... 72.2 rpm	Output speed for remote operation in direction OPEN.
P4.4	Speed	Remote Close	2.5... 72.2 rpm	As P4.3, but in direction CLOSE.
P4.5	Speed	Emergency Open	2.5... 72.2 rpm	Output speed for emergency operation in direction OPEN.
P4.6	Speed	Emergency Close	2.5... 72.2 rpm	As P4.5, but in direction CLOSE.
P4.7	Speed	Torque-dependent	2.5... 72.2 rpm	Seal-tight speed. Speed at which the actuator runs near the end position at torque-dependent switch-off (see P1.3 and P1.4).
P4.8	Speed	Minimum	2.5... 72.2 rpm	Minimum speed.

CAUTION: The max. speed for the 24 VDC actuator version is reduced to 20 rpm.



²⁾representative for CM03

7.4 Parameter group: Ramp (optional)

The start ramp can be set separately for each operation mode. Thus, a 100% start ramp means that the motor attains its maximum speed in about a second. Higher speeds (see section 7.3) lead to shorter runtimes. If the ramp is set below 100%, the starting time increases in an inversely proportional fashion.

	Menu item	Sub-menu item	poss. setting	Notes / comments
P5.1	Ramp	Local	1...100%	Start ramp for local operation
P5.2	Ramp	Remote	1...100%	Start ramp for remote operation
P5.3	Ramp	Emergency	1...100%	Start ramp for emergency operation

7.5 Parameter group: Control

	Menu item	Sub-menu item	poss. setting	Notes / comments
P6.2	Control	Ready delay	0...10 sec	Drop-out delay for the ready signal (bin. outputs)
P6.5 ³⁾	Control	24 V output	0	24 V auxiliary output is deactivated (section 20.5, page 55). The function of the auxiliary input is still activated.
			1	24 V auxiliary output is activated (section 20.5, page 55).
P6.6	Control	Min. impuls	0.1...2.0 sec	Minimum switch-on time of the motor.

7.6 Parameter group: Password

The actuator control can be password-protected to prevent access at different levels. It is possible to prevent entry by unauthorized personnel or to entirely lock motor operation. Default password is set to "000" and thus deactivated.

You can use both numbers and capital letters in your password. After entering a password, password protection is activated. To remove password protection, enter an empty password (000).

When accessing a password-protected parameter, the user is automatically prompted for its introduction. Only after correctly entering the password, it is possible to change the corresponding parameters.

	Menu item	Sub-menu item	poss. setting	Notes / Comments
P7.1	Password	Reading PWD	3-digit	Status display and history data are still viewable; access to the parameter menu is locked until this password is introduced. Parameter menu scrolling is only enabled after entering the password. Electric motor operation is unlocked.
P7.2	Password	Writing PWD	3-digit	Status display, history data and parameter menu can be viewed. However, parameters become read-only.
P7.3	Password	Bluetooth PWD	15-digit	password for the Bluetooth connection, empty password deactivates the password request.

7.7 Parameter group: Position

In addition to OPEN and CLOSED end positions, you may define intermediate positions. These can be used as feedback signals for the binary outputs or as target value for fix position approach.

CAUTION: If you change the end positions (see section 7.1, page 22), intermediate positions are retained percentage-wise, i.e., the absolute positions of the intermediate positions change.



³⁾since firmware 1.303

	Menu item	Sub-menu item	Poss. setting	Notes / comments
P8.1	Position	Intermed.pos.1	TEACHIN 0...100%	Position value of intermediate position 1
P8.2	Position	Intermed.pos.2	TEACHIN 0...100%	see above
P8.3	Position	Intermed.pos.3	TEACHIN 0...100%	see above
P8.4	Position	Intermed.pos.4	TEACHIN 0...100%	see above
P8.5	Position	Emerg.position	TEACHIN 0...100%	Position value of the emergency position.
P8.6	Position	Hysteresis	0.1...10.0%	Hysteresis range of intermediate positions. Within this hysteresis, no repositioning occurs upon reaching the intermediate positions (option: fix position approach). Furthermore, the output functions for position = intermediate position are active within this range (see P10.1 ...).

7.8 Parameter group: Binary inputs

The controller is equipped with 5 freely configurable binary inputs. Please find further information on technical data of the binary inputs in section 20.2, page 52. Binary inputs are also effective during actuator control via Profibus (option).

Default binary inputs are as follows:

Input 1: OPEN

Input 2: CLOSED

Input 3: STOP

Input 4: EMERGENCY OPEN

Input 5: EMERGENCY Closed

	Menu item	Sub-menu item	poss. setting	Notes / comments
P9.1	Bin. Input	Input 1	0: no function	this input has no function
			1: Open	OPEN command in REMOTE mode (selector switch in position REMOTE).
			2: Closed	CLOSED command in REMOTE mode (selector switch in position REMOTE).
			3: Stop	STOP command in REMOTE mode (selector switch in position REMOTE).
			4: Open Self-hold	Self-hold for OPEN, i.e., a short pulse is sufficient and the actuator moves then into the end position. Use the STOP command to stop the actuator.
			5: Closed Self hold	Self-hold for CLOSED, see OPEN SELF-HOLD
			6: Emergency Open	Superimposed run command; run the actuator in direction OPEN regardless of whether the selection switch is set to REMOTE or LOCAL operation
			7: Emergency Closed	Superimposed run command; run the actuator in direction CLOSED regardless of whether the selection switch is set to REMOTE or LOCAL
			8: Release	The actuator may be operated only with a switched signal. Both in local and remote operation
			9: Open/Closed	The actuator moves towards OPEN if input is active and towards CLOSED otherwise
			10: Close/Open	The actuator moves towards CLOSED if input is active and towards OPEN otherwise
			11: Positioner	Release of the positioner
			12: Open inv.	As open but active low
			13: Close inv.	As CLOSED but active low
			14: Stop inv.	As STOP but active low
			15: Open Self-Hold.inv	As Open Self-Hold but active low
16: Closed Self-Hold inv	As Closed Self-Hold. but active low			

continued on next page

continued from previous page

Menu item	Sub-menu item	poss. setting	Notes / comments
		17: Emergency-Open inv.	As Emergency-Open but active low
		18: Emergency-Closed inv.	As Emergency-Closed but active low
		19: Block	with activated (switched) signal, the actuator is locked for operation also in local mode
		20: Contoller lock	Positioner lock
		21: Release Local	The actuator may be operated only with a switched signal.
		22: Block Local	as Release Local but active low
		23: Lock Open	Trigger lock OPEN (in LOCAL and REMOTE mode). Actuator moves with the highest priority to OPEN; command continues internally active after reaching the end position OPEN. Dropping only with LOCK OFF, Supply OFF or operating mode OFF.
		24: Lock Closed	Trigger lock CLOSED (in LOCAL and REMOTE mode). Actuator moves with the highest priority to CLOSED; command continues internally active after reaching the end position CLOSED. Dropping only with LOCK OFF, Supply OFF or operating mode OFF.
		25: Lock Off	Drop the lock
		26: Failsafe	Trigger the failsafe function in all operating modes (only functional in Failsafe actuators).
		27: Failsafe inv.	As Failsafe, but active low
		28: Lock Open inv.	As Lock Open, but active low
		29: Lock Closed inv	As Lock Closed, but active low
		30: Lock Off inv.	As Lock Off, but active low
		31: Intermediate position1	Approach intermediate position 1 (P8.1) in REMOTE mode (fix position approach). There is no repositioning upon reaching the intermediate position within the hysteresis (see P8.6). Higher priority than intermediate position 2, 3 and 4
		32: Intermediate position2	As intermediate position 1, but with higher priority than intermediate positions 3 and 4
		33: Intermediate position3	As intermediate position 1, but with higher priority than intermediate position 4
		34: Intermediate position4	As intermediate position 1, but with lowest priority.
		35: Emergency position	Approach emergency position (P 8.5). As intermediate position 1, but with higher priority than intermediate positions 1, 2
		36: Intermediate position1 inv.	As Intermediate position 1, but active low
		37: Intermediate position2 inv.	As Intermediate position 2, but active low
		38: Intermediate position3 inv.	As Intermediate position 3, but active low
		39: Intermediate position4 inv.	As Intermediate position 4, but active low
		40: Emergency position inv.	As Emergency position, but active low
		41: Travel Open	reserved for future use
		42: Travel Close	reserved for future use
		43: Travel Open inv.	reserved for future use

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
			44: Travel Close inv.	reserved for future use
			45: Failsafe lock	reserved for future use (only for Failsafe actuators)
			46: Failsafe lock inv.	reserved for future use (only for Failsafe actuators)
P9.2	Bin. Input	Input 2	see Input 1	
P9.3	Bin. Input	Input 3	see Input 1	
P9.4	Bin. Input	Input 4	see Input 1	
P9.5	Bin. Input	Input 5	see Input 1	

7.9 Parameter group: Binary outputs

The controller is equipped with 8 freely configurable binary outputs. Please find further information on technical data of the binary outputs in section 20.1, page 52. Provided with external supply, binary outputs are optically isolated from the rest of the controller.

Default binary outputs are as follows:

Output 1: Ready	Output 2: End position OPEN
Output 3: End position CLOSED	Output 4: Run OPEN
Output 5: Run CLOSED	Output 6: Torque
Output 7: LOCAL	Output 8: REMOTE

	Menu item	Sub-menu item	poss. setting	Notes / comments
P10.1	Bin. Output	Output 1	0: User defined	Optional
			1: Ready	Actuator is ready
			2: Fault	General fault; actuator is not ready
			3: Open	Actuator is in open position
			4: Closed	Actuator is in closed position
			5: Running Open	Actuators runs in direction Open
			6: Running Closed	Actuators runs in direction Closed
			7: Runing	Actuator is running in either Open or Closed
			8: Torque Open	Switch-off torque was reached in Open direction, actuator has been switched off
			9: Torque Closed	Switch-off torque was reached in Closed direction, actuator has been switched off
			10: Torque	Switch-off torque was reached in either Closed or Open direction
			11: Travel Open	The Open end position has been reached
			12: Travel Closed	The Closed end position has been reached
			13: Pos. > Int.1	Position > Intermediate position 1
			14: Pos. < Int.1	Position < Intermediate position 1
			15: Pos. > Int.2	Position > Intermediate position 2
			16: Pos. < Int.2	Position < Intermediate position 2
			17: Pos. > Int.3	Position > Intermediate position 3
			18: Pos. < Int.3	Position < Intermediate position 3
			19: Pos. > Int.4	Position > Intermediate position 4
20: Pos. < Int.4	Position < Intermediate position 4			
		21: Local	Local operating mode (selector switch in position)	
		22: Remote	Remote operating mode (selector switch in position Remote)	
		23: Off	Off operating mode (selector switch in the Off position)	
		24: no function	no function	
		25: motor error	The motor temperature sensor has reported an error	

continued on next page

continued from previous page

Menu item	Sub-menu item	poss. setting	Notes / comments
		26: Always	Signal is always on
		27: Never	Signal is always off
		28: Bin. Input 1	Forwarding of binary input to output
		29: Bin. Input 2	Forwarding of binary input to output
		30: Bin. Input 3	Forwarding of binary input to output
		31: Bin. Input 4	Forwarding of binary input to output
		32: Bin. Input 5	Forwarding of binary input to output
		33: Torque Open ma.	As Torque OPEN, but it will suppress (mask) this signal in the end position upon torque-dependent switch-off.
		34: Torque Closed ma.	As Torque CLOSED, but it will suppress (mask) this signal in the end position upon torque-dependent switch-off.
		35: Ready Remote	Ready and Remote operating mode
		36: Ready Local	Ready and Local operating mode
		37: Ready Local/remote	Ready and Local or Remote mode
		38: Lock Open	Lock OPEN is enabled. OPEN command is internally queued with the highest priority and will not be dropped even in the end position.
		39: Lock Closed	Lock CLOSED is enabled. CLOSED command is internally queued with the highest priority and will not be dropped even in the end position.
		40: Failsafe OK1	Failsafe OK (only for Failsafe actuators)
		41: Failsafe OK2	Failsafe OK and Ready (only for Failsafe actuators)
		42: Failsafe OK3	Failsafe OK, Ready and Remote (only for Failsafe actuators)
		43: Lock	Lock Open or Lock Closed is enabled.
		44: Ready/TorqueOK	Actuator is ready and no torque switch-off
		45: Ready / Remote / TorqueOK	Actuator is ready for operation in REMOTE mode and no torque switch-off
		46: Pos.=Int1	Position = Intermediate position 1. The width of the interval is set with the parameter P8.6.
		47: Pos.=Int2	Position = Intermediate position 2. The width of the interval is set in parameter P8.6.
		48: Pos.=Int3	Position = Intermediate position 3. The width of the interval is set in parameter P8.6.
		49: Pos.=Int4	Position = Intermediate position 4. The width of the interval is set in parameter P8.6.
		50: Pos.=EmergPos	Position = emergency position. The width of the interval is set in parameter P8.6.
		51: Bus Bit 1	In existing bus interface (hardware option), the output is set according to the selected bit bus. ⁴⁾
		52: Bus Bit 2	
		53: Bus Bit 3	
		54: Bus Bit 4	
		55: Bus Bit 5	
		56: Bus Bit 6	
		57: Bus Bit 7	
		58: Bus Bit 8	
		59: Virtual 1	Configurable output function
		60: Virtual 2	
		61: Virtual 3	
		62: Virtual 4	

continued on next page

⁴⁾from Firmware 1.323

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
			63: Line voltage OK	Supply voltage for the motor is OK
			64: Control voltage OK	The auxiliary voltage for the SMARTCON control is OK. This function is only available if the auxiliary voltage output is not switched on (P6.5 to 0).
			65: Oil pressure OK	The oil pressure is higher than the minimum pressure (P6.10).
			66: Oil level OK	The oil level is OK.
			67: pump OK	The temperature sensor in the pump motor and the external motor protection have not tripped.
4-5 P10.2	Bin. Output	Output conf. 1	0: normal	Output 1 is set to normal, i.e. if the condition in point P10.1 is met, Output 1 is set to HIGH (active HIGH).
			1: inverted	If the condition in point P10.1 is met, Output 1 is set to LOW (active LOW).
			2: norm. flashing	If the condition in point P10.1 is met, Output 1 starts blinking (active HIGH).
			3: inv. flashing	If the condition in point P10.1 is not met, Output 1 starts blinking (otherwise it is set to HIGH).
P10.3	Bin. Output	Output 2	see Output 1	
P10.4	Bin. Output	Output 2 Konf.	see Output 1 conf.	
P10.5	Bin. Output	Output 3	see Output 1	
P10.6	Bin. Output	Output 3 Konf.	see Output 1 conf.	
P10.7	Bin. Output	Output 4	see Output 1	
P10.8	Bin. Output	Output 4 Konf.	see Output 1 conf.	
P10.9	Bin. Output	Output 5	see Output 1	
P10.10	Bin. Output	Output 5 Konf.	see Output 1 conf.	
P10.11	Bin. Output	Output 6	see Output 1	
P10.12	Bin. Output	Output 6 Konf.	see Output 1 conf.	
P10.13	Bin. Output	Output 7	see Output 1	
P10.14	Bin. Output	Output 7 Konf.	see Output 1 conf.	
P10.15	Bin. Output	Output 8	see Output 1	
P10.16	Bin. Output	Output 8 Konf.	see Output 1 conf.	

CAUTION: When using the parameters torque-dependent OPEN or torque-dependent CLOSED (see section 7.1, page 22, items P1.3 and P1.4), the actuator will only be open or closed when the set torque and the associated end position is reached. If the end position is not reached, a torque error is reported (see section 6.2.2, page 17).



7.10 Parameter group: Position output (optional)

Position output is used to indicate the current position of the actuator using 0/4...20 mA; it can be retrofitted using a Smart-code.

If this option is not enabled, the menu point shows the message "inactive".

No adjustment to the end positions or the travel is required. Adjustment is automatically performed during the configuration of travel limit positions (see section 7.1, page 22).

No further settings are necessary for torque-dependent switch-off, because the controller exclusively uses travel limit positions for the calculation, regardless of whether this is defined by the torque or the travel limit positions.

The factory default setting is:

4 mA at 0% position 20 mA at 100% position

	Menu item	Sub-menu item	poss. setting	Notes / comments
P11.1	PositionOutput	Function 1	0: off	mA output disabled
			1: Position	mA output corresponds to the actual position value.

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
			2: Pos. Valvechar.	mA output corresponds to the actual position value taking into account the valve characteristic.
			3: Torque 1	mA output corresponds to the actual torque value.
				torque = 100% Close: mA output = start
				torque = 0%: mA output = center
				torque = 100% Open: mA output = end
			4: Torque 2	mA output corresponds to the actual torque value.
				torque = 100% Close: mA output = end
				torque = 0%: mA output = start
				torque = 100% Open: mA output = end
			5: Torque 3	mA output corresponds to the actual torque value.
				torque = 150% Close: mA output = start
				torque = 0%: mA output = center
				torque = 150% Open: mA output = end
			6: Torque 4	mA output corresponds to the actual torque value.
				torque = 150% Close: mA output = end
				torque = 0%: mA output = start
				torque = 150% Open: mA output = end
P11.2	Position output	Begin 1 (at 0%)	0...20.5 mA {4 mA}	mA value for the Closed (0%) position
P11.3	Position output	End 1 (at 100%)	0...20.5 mA {20 mA}	mA value for the On (100%) position
P11.4	Position output	Calib. 20 mA 1	-10%...+10%	Calibrating the output position during the setting of this parameter will output a 20 mA (100%) signal. Use this parameter to calibrate accurately the 20 mA output signal (e.g., if you measure 19.8 mA at the output, just add 1% (0.2 mA... 1% of 20 mA) to the displayed value).
P11.5	Analog output	Function 2	see Function 1	
P11.6	Analog output	Begin 2 (at 0%)	see Begin 1	
P11.7	Analog output	End 2 (at 100%)	see End 1	
P11.8	Analog output	Calib. 20 mA 2	see Calib. 20 mA 1	

7.11 Parameter group: Step mode

Step mode operation can be used to extend the operating time in certain ranges or for the whole travel; it is available in local, remote and emergency mode.

Step mode operation can be activated individually for the directions OPEN and CLOSED.

Cycle start, cycle end, cycle duration and interval time can be set separately for both directions (see Figure 54, page 32).

	Menu item	Sub-menu item	poss. setting	Notes / comments
P12.1	Step mode function	Mode	0: disabled	Step mode operation is disabled
			1: enabled	Step mode operation is enabled in LOCAL, REMOTE and EMERGENCY operation
			2: Local only	Step mode mode is only enabled in LOCAL mode
			3: Remote only	Step mode mode is only enabled in REMOTE mode
			4: Local + Remote only	Step mode mode is enabled in REMOTE and LOCAL mode
P12.2	Step mode function	Start Open	0...100%	In OPEN direction, position in % from which the step mode operation should start.
P12.3	Step mode function	End Open	0...100%	In OPEN direction, position in % of which the step mode operation should end.

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
P12.4	Step mode function	Runtime Open	0.1...60	Runtime in OPEN direction
P12.5	Step mode function	Pause time Open	0.2...60	Pause time in OPEN direction
P12.6	Step mode function	Start Closed	0...100%	In CLOSED direction, position in % from which the step mode operation should start.
P12.7	Step mode function	End Closed	0...100%	In CLOSED direction, position in % of which the step mode operation should end.
P12.8	Step mode function	Run time Closed	0.1...60	Runtime in Closed direction
P12.9	Step mode function	Pause time	0.2...60	Pause time in Closed direction
P12.10	Step mode function	Timebase	0: Seconds	Time basis for run and pause times
			1: Minutes	
P12.11	Step mode function	Speed adaption	0:	Speed adaption not activated. Normal step mode function.
			1:	Speed adaption is activated. The speed is reduced according to the runtime and pause time in the step mode range. (Example: Running time 1 sec and pause time 1 sec results in half the speed). If the minimum speed is undershot, the actuator clocks in the converted ratio with the minimum speed. The speed adjustment is only applicable to actuators of the type CM and AB CSC.

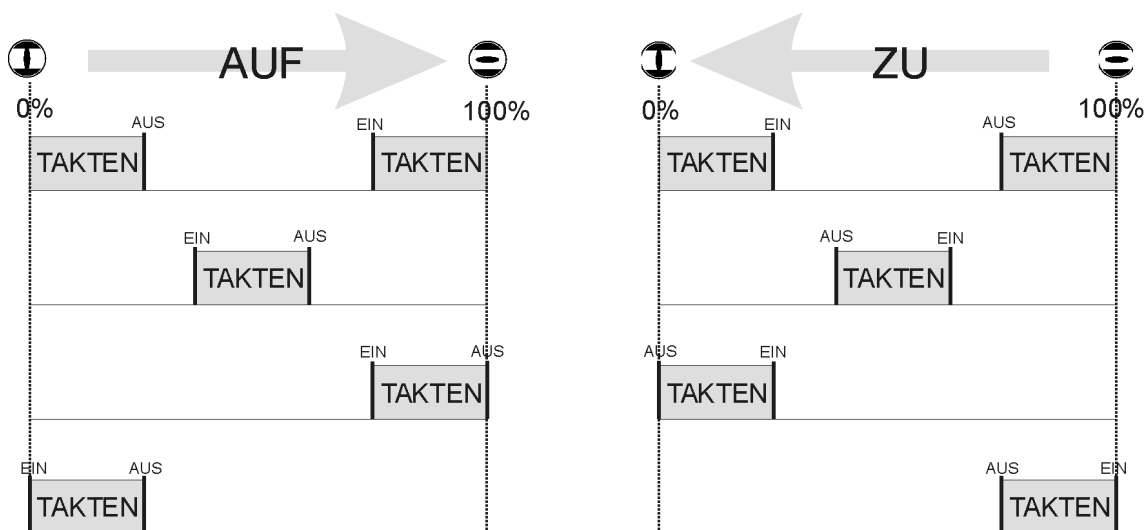


Figure 54

NOTE: It is important to ensure that the mode of operation is not exceeded!
The running info on the actuator (see section 6.2.2, page 17) only flashes while the drive is running, i.e. during the break, no flash!



7.12 Parameter group: Positioner (optional)

The positioner SR option is used to control the electric actuator by means of a set point input 0/4...20 mA signal. The SR helps control the position of the actuator, i.e. the positioner ensures that the actual value and thus the position of the actuator matches the desired set point.

	Menu item	Sub-menu item	poss. setting	Notes / comments
P13.1	Positioner	Function	off	Positioner disabled

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
			1: Position	mA input for the position setpoint
			2: Pos. valvechar.	mA input for the position setpoint, taking into account the valve characteristic
P13.2	Positioner	Begin (at 0%)	0...20.5 mA {4.0 mA}	mA value of the setpoint for the CLOSED (0%) position
P13.3	Positioner	End (at 100%)	0...20.5 mA {20.0 mA}	mA value of the setpoint for the OPEN (100%) position
P13.4	Positioner	Dead band	0.1...10.0% {1.0%}	Tolerance range for the control deviation (set point position – actual position) where no adjustment occurs. The deadband should not be set too low to prevent actuator oscillation.
P13.5	Positioner	Gain	1...100% {100%}	The gain (gradient) affects the positioning close to the target position. The smaller the gain selected (e.g. 20%), the earlier the actuator starts reducing its speed in case of speed variable actuators on approaching the target position. In case of actuators with fixed speed (reversing starters), the speed reduction is done by pulsing (also see params P13.9 and P13.10). This leads to better positioning (smaller reachable deadband). A 100% setting disables this gradient.
P13.6	Positioner	Live zero detect.	Ignore	The setpoint monitoring (monitoring the setpoint to below approximately 2 mA = loss of signal) is disabled.
			1: Stop	Actuator stops on signal failure.
			2: Open	On signal failure, actuator moves the OPEN position.
			3: Close	Actuator moves on signal failure to the CLOSED position.
			4: Emerg.pos.	On signal failure, the actuator moves the defined emergency position (see parameter P13.7).
			5: Emerg. PID	reserved for future use
P13.7	Positioner	Emergency pos.	0...100% {50,0%}	Determination of the emergency position (Can also be set in the menu P8.5)
P13.8	Positioner	Calib. setpoint	-10%...+10%	Calibration value for the mA setpoint. Calibration process: By applying 20 mA on the setpoint input, this parameter is corrected until the readout matches 20 mA.
P13.9	Positioner	Min. impulse	{0,2 s}	Variable speed actuators (Actusmart CM and Smartcon CSC FU): Without function Fixed speed actuators (Smartcon CSC): Minimum activation time of the reversing contactors. For very small activation times (<0.3...0.5 s), the motor will be switched off during start-up process, which significantly increases mechanical wear on reversing contactors. With frequent periods of very small activation times (restless loop, small dead zone, clocking near to the target value), we therefore recommend electronic reversing contactors.
P13.10	Positioner	Period	{2.0 s}	Variable speed actuators (Actusmart CM and Smartcon CSC FU): Without function Fixed speed actuators (Smartcon CSC): This parameter is only relevant in Step mode when approaching the target position (parameter gain smaller than 100%) and determines the period of a run / pause cycle.
P13.11	Positioner	Begin pos. (a0)	0.0...25.0% {2.0%}	Smallest controllable position other than the end position CLOSED. The range 0%...a0 will be just passed through. Use the parameter a0 to define the beginning of the allowable control range of the valve (e.g., blind spot for ball segment valves, etc.).
P13.12	Positioner	End pos. (e0)	75.0...100.0% {98.0%}	Largest controllable position other than the end position OPEN. The area e0...100% is just passed through. Use the parameter e0 to define the end of the allowable control range of the valve.

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
P13.13	Positioner	Begin setp. (a1)	0.0...25.0% {2.0%}	Below this value, the end position CLOSED is controlled. In the range 0%...a1 cannot be controlled (end position tolerance). The initial setpoint a1 is associated with a small hysteresis (1/4 of the deadband).
P13.14	Positioner	End setp. (e1)	75.0...100.0% {98,0%}	Above this value, the end position OPEN is controlled. The range e1...100% cannot be controlled (end position tolerance). The final setpoint e1 is associated with a small hysteresis (1/4 of the deadband).
P13.15	Positioner	Calib.setpoint offset	-10%...+10%	Calibration of zero for the input setpoint. 1% = 0.2 mA

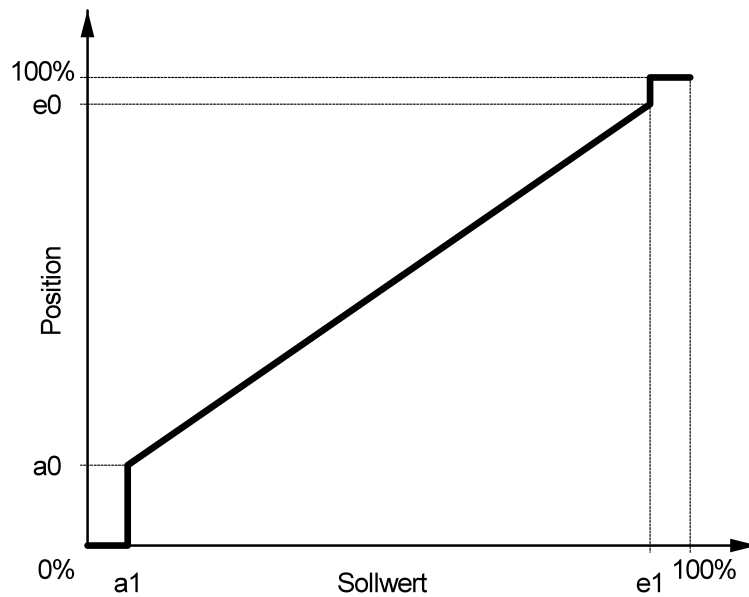


Figure 55: Assigning the position to the setpoint

7.13 Parameter group: PID controller (optional)

The optional PID controller is used for controlling an external actual value (process variable) to a setpoint using 0/4...20 mA signal by readjusting the actuator.

	Menu item	Sub-menu item	poss. setting	Notes / comments
P14.1	PID-controller	Function	0: disabled	PID controller disabled
			1: Position	The output of the PID controller corresponds to the position setpoint of the actuator. The positioning (tracking of the actual position to the setpoint) is done by the positioner (see section 7.12).
			2: Speed	The output of the PID controller corresponds to the speed of the actuator (speed mode is only possible for Actusmart CM and Smartcon CSC FU!). There is no adjustment with the positioner. ⁵⁾
			3: Speed	The output of the PID controller corresponds to the change of the position setpoint (speed) of the actuator. The positioning (tracking of the actual position to the setpoint) is done by the positioner (see section 7.12). Hence a control mode similar to the Speed mode (see Setting 2, above) is possible also for actuators with constant speed. ⁶⁾

⁵⁾from firmware 1.338

⁶⁾from firmware 1.338

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
P14.2	PID-controller	External Setpoint	0: fixed	The PID controller uses an internal, fixed setpoint (see param P14.3).
			1: external	The PID controller uses the external setpoint. Adjust this setpoint with the params P13.2 and P13.3 (see section 7.12).
P14.3	PID-controller	Fixed setpoint	0 ... 100%	Specification of the internal fixed setpoint
P14.4	PID-controller	Start (at 0%)	0 ... 20.5 mA	mA value at 0% of the external actual value
P14.5	PID-controller	End (at 100%)	0 ... 20.5 mA	mA value at 100% of the external actual value
P14.6	PID-controller	Gain (P)	-50.0 ... +50.0	Gain (proportional value) of the PID-controller. A negative value reverses the effective direction of the PID-controller, e.g.: Positive gain: The actuator opens when the desired value is greater than the external actual value. Negative gain: The actuator closes when the desired value is greater than the external actual value.
P14.7	PID-controller	Reset time (I)	0 ... 100.0 s	The shorter the reset time (integral time, integral value), the stronger the effect of the integral component of the PID-controller. Values below 1.0 will disable the integral component.
P14.8	PID-controller	Lead time (D)	0 ... 100.0 s	The larger the lead time (differential/derivative value), the stronger the effect of the derivative component of the PID-controller. To reduce the influence of noise, a first-order lag element with 1 sec time constant is added (DT ₁).
P14.9	PID-controller	Offset	-200 ... +200%	The offset value will be added to the output value of the PID controller.
P14.12	PID-controller	Live zero detect.	0: Ignore	The monitoring of the external actual value is disabled.
			1: Stop	Actuator stops on signal failure of external. actual value
			2: Open	On signal failure of external actual values, actuator moves to the OPEN position.
			3: Closed	On signal failure of external actual values, actuator moves to the CLOSED position.
			4: Emergency position	On signal failure of external actual values, actuator moves to the EMERGENCY position (see param P13.7).
			5: Emergency PID	reserved for future use
P14.13	PID-controller	Calibration of ext. actual value	-10.0 ... +10.0%	Calibration process: By applying 20 mA to the external actual value input, this parameter is corrected until the readout matches 20 mA.
P14.14	PID-controller	Process begin	-32768 ... +32767	Mantissa of the real process variable (begin of external actual value)
P14.15	PID-controller	Process end	-32768 ... +32767	Mantissa of the real process variable (end of external actual value)
P14.16	PID-controller	Process comma shift	-3 ... +3	Position of the comma for process begin/end (P14.14, P14.15), e.g.: mantissa = 200, comma shift = -2/2, process value = 2.00/20000
P14.17	PID-controller	Process unit	—	Unit of the real process variable
P14.18	PID-controller	Dead band	0.1 ... 10.0% {1.0%}	Tolerance range for the control deviation (set point – external actual value) where no adjustment occurs. ⁷⁾

7.14 Parameter group: Bus systems (optional)

The manuals for the Bus systems are available in the download area on our homepage www.schiebel-actuators.com under the tab **Quality & Service**.

⁷⁾from firmware 1.340

7.15 Parameter group: Characteristic curves (optional)

With this option, customers can enable travel-dependent torque, speed and valve characteristic curves.

7.15.1 Torque characteristic

With this characteristic curve, torque limits already set under menu item **P2-torque** (see section 7.2, page 24) can be further **reduced** depending on travel. Characteristics can be configured via the SMARTTOOL software (see Figure 56, page 36).

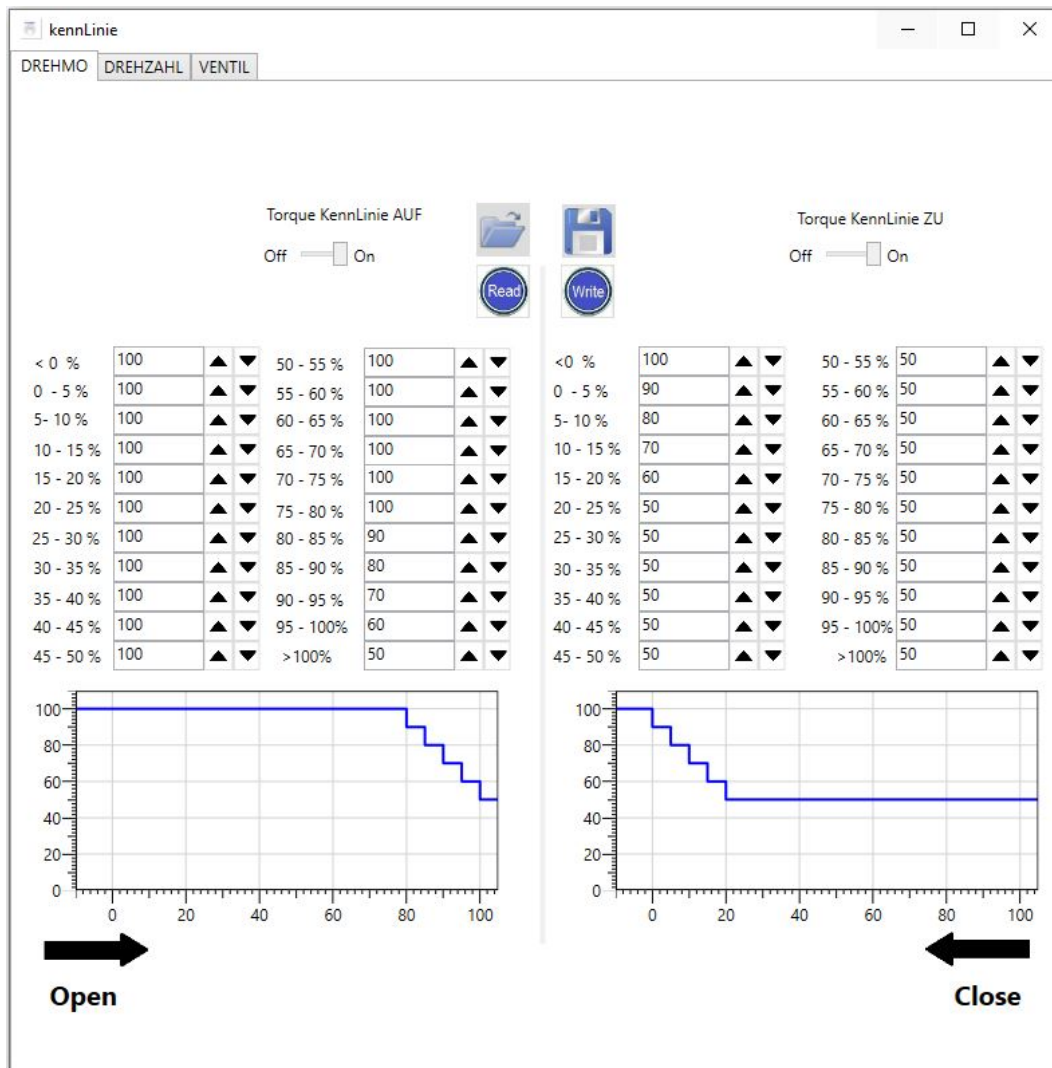


Figure 56: Torque characteristic

	Menu item	Sub-menu item	poss. setting	Notes / comments
P17.1	Characteristic	Torque Open	0: Off	The torque characteristic curve is disabled for the OPEN direction.
			1: On	The torque characteristic curve is enabled for the OPEN direction.
			2: Local + Remote only	The torque characteristic curve is enabled for the OPEN direction only in LOCAL and REMOTE mode (while disabled in the EMERGENCY mode).
P17.2	Characteristic	Torque Closed	0: Off	The torque characteristic curve is disabled for the CLOSED direction.
			1: On	The torque characteristic curve is enabled for the CLOSED direction.
			2: Local + Remote only	The torque characteristic curve is enabled for the CLOSED direction only in LOCAL and REMOTE mode (while disabled in the EMERGENCY mode).

7.15.2 Speed characteristic

With this characteristic curve, speed limits already set under menu item **P4-speed** (see section 7.3, page 24) can be further **reduced** depending on travel. Characteristics can be configured via the SMARTTOOL software (see Figure 57, page 37).

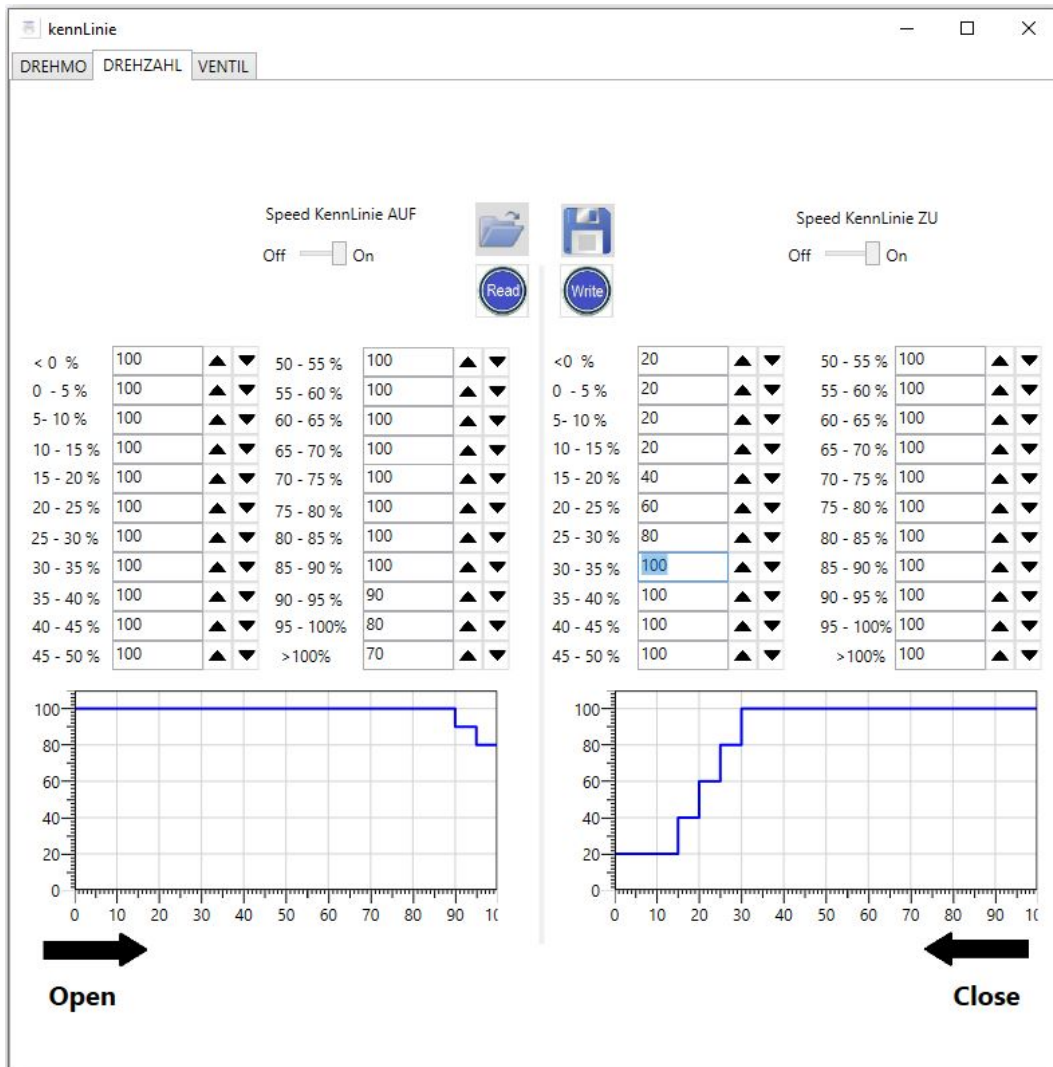


Figure 57: Speed characteristic

	Menu item	Sub-menu item	poss. setting	Notes / comments
P17.3	Characteristic	Speed Open	0: Off	The speed characteristic curve is disabled for the OPEN direction.
			1: On	The speed characteristic curve is enabled for the OPEN direction.
P17.4	Characteristic	Speed Closed	0: Off	The speed characteristic curve is disabled for the CLOSED direction.
			1: On	The speed characteristic curve is enabled for the CLOSED direction.

7.15.3 Valve characteristic

With this characteristic curve the mapping between the actuator position and the setpoint of the valve can be adjusted. Hence it is possible to compensate and linearize the general nonlinear characteristic curves of valves. Characteristics can be configured via the SMARTTOOL software (see Figure 58, page 38).



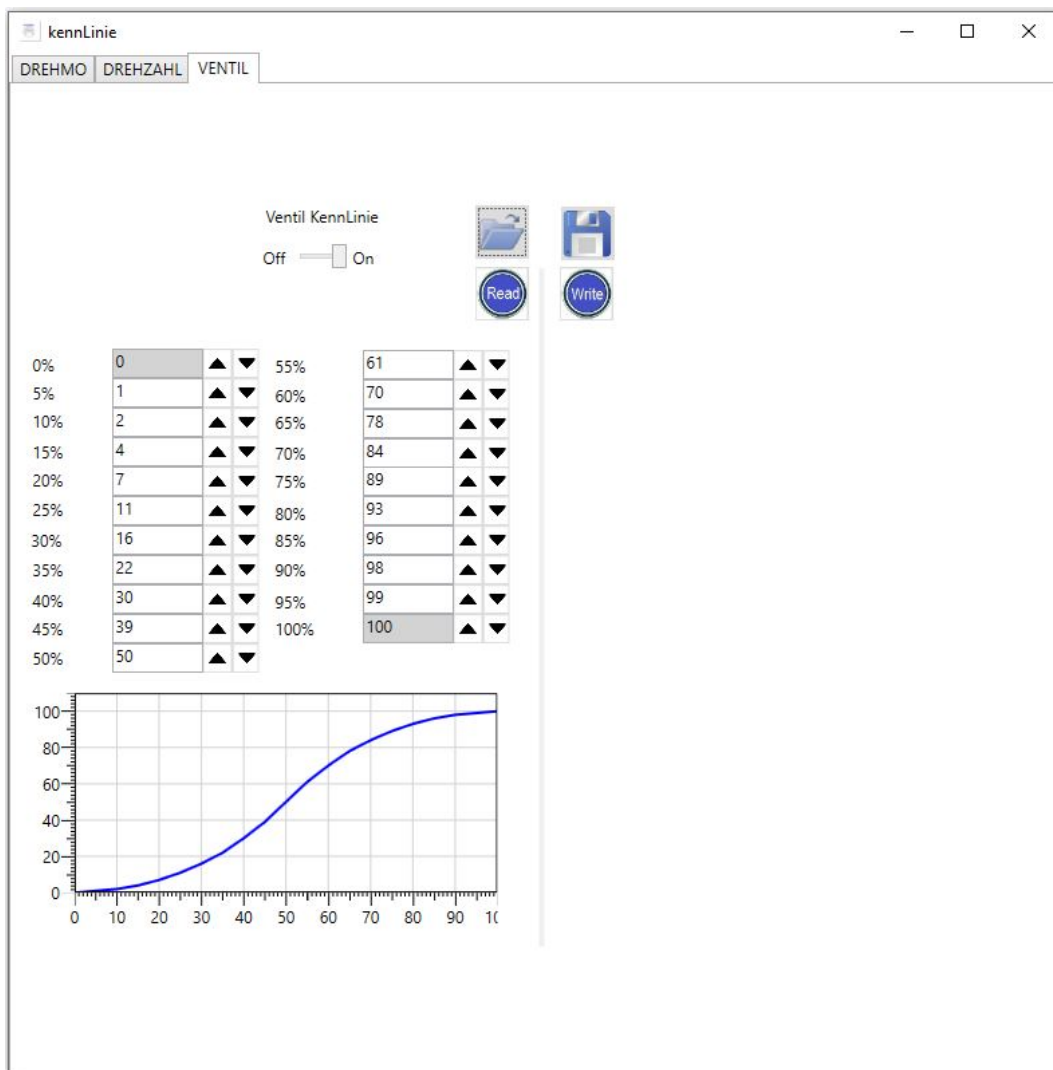


Figure 58: Valve characteristic

	Menu item	Sub-menu item	poss. setting	Notes / comments
P17.5	Characteristic	Valve	0: Off	The valve characteristic curve is disabled.
			1: user defined	The valve characteristic curve is enabled as configured in the SMARTTOOL.

7.16 Parameter group: Identification (optional)

This option allows entering further custom-identification parameters.

	Menu item	Sub-menu item	poss. setting	Notes / comments
P18.1	Identification	PPS number	15 digits	Used to enter a PPS number. This is displayed in the bottom line. CAUTION: Param P20.5 must be set to 0.

7.17 Parameter group: System parameters (locked)

Used for actuator configuration and not available for customers.

7.18 Parameter group: Miscellaneous

	Menu item	Sub-menu item	poss. setting	Notes / comment
P20.1	Miscellaneous	Language	0: German	Defines the menu language
			1: English	
			2: Russian	

continued on next page

continued from previous page

	Menu item	Sub-menu item	poss. setting	Notes / comments
			3: Czech	
			4: Spanish	
			5: French	
			6: Italian	
			7: Danish	
			8: Hungarian	
			9: Turkish	
			10: Greek	
			11: Polish	
			12: Serbian	
			13: Croatian	
P20.2	Miscellaneous	Smartcode		Enables additional features by entering a Smartcode
P20.3	Miscellaneous	Restore para	0:	no action
			1: Custpara -	By saving this setting, all parameters except the end positions are reset to the customer parameters.
			2: Custpara +	By saving this setting, all parameters are reset to the customer parameters.
			3: Backuppara -	By saving this setting, all parameters except the end positions are reset to the factory settings.
			4: Backuppara +	By saving this setting, all parameters are reset to the factory settings.
P20.4	Miscellaneous	Backup para	0:	no action
			1: Custpara	By saving this setting, the currently set parameters are adopted as customer parameters.
P20.5	Miscellaneous	Info line	0...31	The fourth line of the display shows various diagnostic values.
P20.6	Miscellaneous	Infrared	0: Off	The infrared connection is disabled.
			1: Infrarot	The infrared connection is active for about 3 minutes unless communication is detected.
			2: Bluetooth	The Bluetooth connection is active for about 3 minutes unless communication is detected.
			3: Infrarot+	The infrared connection is activated.
			4: Bluetooth+	The Bluetooth connection is activated.
P20.7	Miscellaneous	Menu style	0...2	different menu styles
P20.11	Miscellaneous	Daylight saving time	0: off	Normal time is activated
			1: on	Daylight saving time is activated.
			2: auto	The actuator switches automatically between Daylight saving time and Normal time.

8 Status area

The status area presents current process and diagnostic data. In this area, data is read-only. To access the status area, move the control switch in the direction where the selector switch should be in the neutral position or in the remote position. The status area is divided into 2 sub-areas:

- Status
- History

8.1 Status

8.1.1 Status – binary outputs

Display of binary outputs: The display shows output control as opposed to output status, i.e. the supply of the binary outputs is ignored. A switched output is represented by 1.

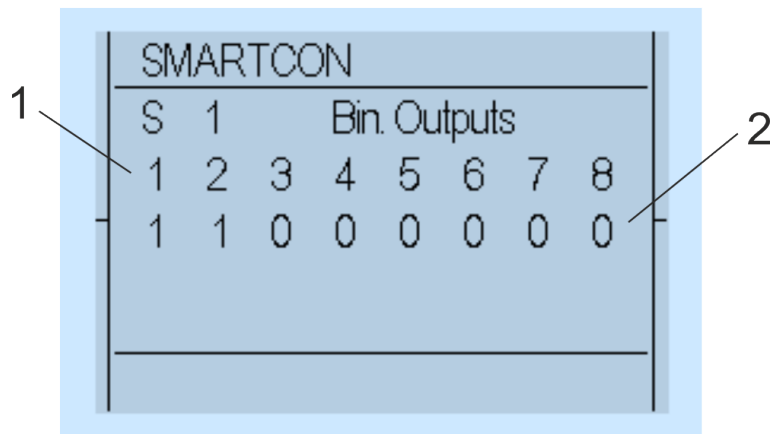


Figure 59: 1... Output Number, 2... Signal (0 = LOW; 1 = HIGH)

8.1.2 Status – binary inputs

Display of binary inputs: A set input is represented by 1.

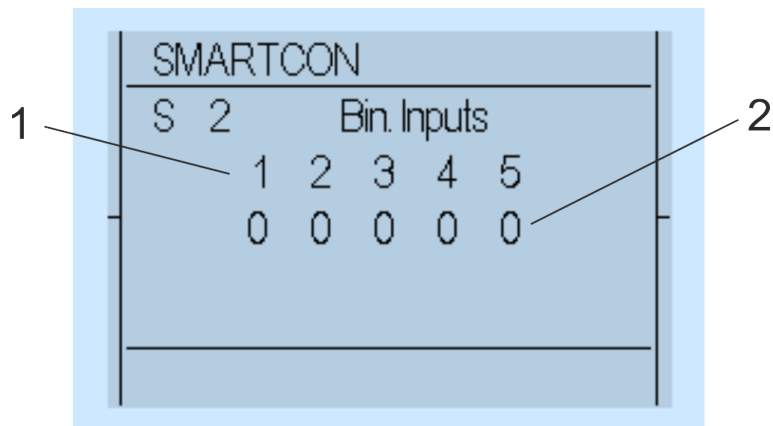


Figure 60: 1... Input number, 2... Signal (0 = LOW; 1 = HIGH)

8.1.3 Status – analog values

Display of analogue values: Input 1 (In1) is used by the positioner as the setpoint; Input 2 (In2) serves as an external value for the optional PID controller. In the analogue output (out), only the control signal is shown, regardless of whether the output current actually flows or not (interruption of the current loop).

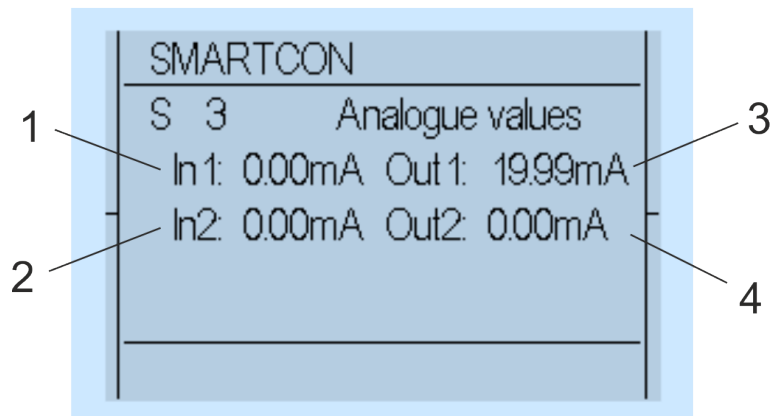


Figure 61: 1... Input 1, 2... Input 2, 3... Output, 4... All values in mA

8.1.4 Status – absolute values

This status displays the absolut position of the actuator.

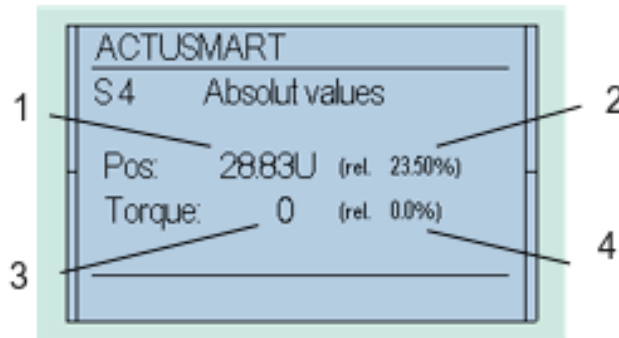


Figure 62: 1... Absolute value of the position unit, 2... Relative value of the position unit 3 and 4... Absolute and relative value for the torque unit (calibrated in factory)

8.1.5 Status – firmware

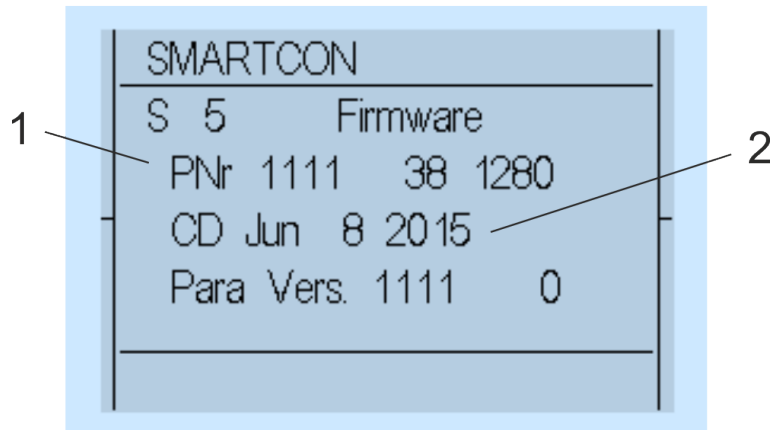


Figure 63: 1... Firmware, 2... Firmware date

8.1.6 Status – serial number

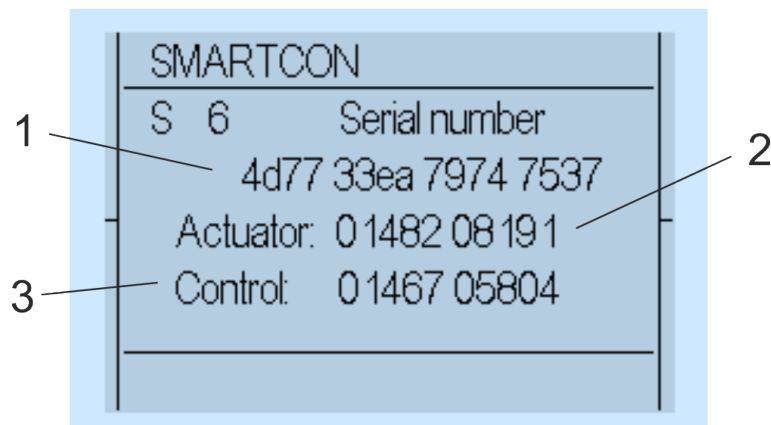


Figure 64: 1... Serial number of the control unit, 2... Serial number of the actuator, 3... Serial number of electronics

8.1.7 Status – meter readings

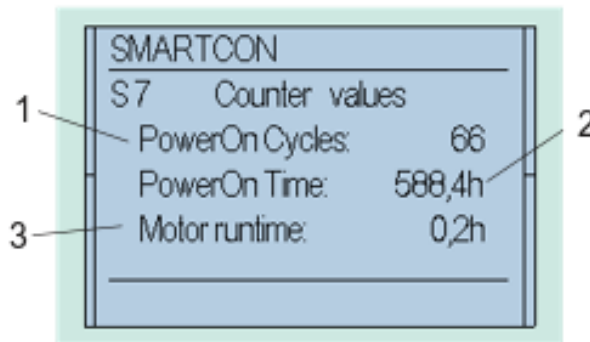


Figure 65: 1... Power-on cycles, 2... Operating hours, 3... Engine duration

8.2 History

History shows the last 20 history entries. In addition to the plain text entry, the time since the last history entry is also provided.

Please note that the actuator can only calculate time if energised. For error analysis, please refer to section 12, page 44.

9 Infrared connection

For easier communication and better visualization of the menu options, the unit provides an infrared port for connection to a PC.

The required hardware (connection cable to the PC's RS-232 or USB connectors) and the corresponding software are available as options.

The SMARTTOOL software, in addition to communication with the actuator, allows the management of multiple actuators to transfer the configuration to different actuators.

This approach can greatly simplify operation.

Please refer to the SMARTTOOL software operating instructions manual for further information.

During operation, it must be ensured that the IR interface surface is protected from strong disturbances which may otherwise compromise the communication.

Before mounting the infrared adapter, clean the surface of the infrared interface with a damp cloth.

When the infrared interface is enabled, it is indicated by LED L5 (see section 6.2.2, Figure 66, page 17). The infrared interface can be enabled in the menu item P20.6.

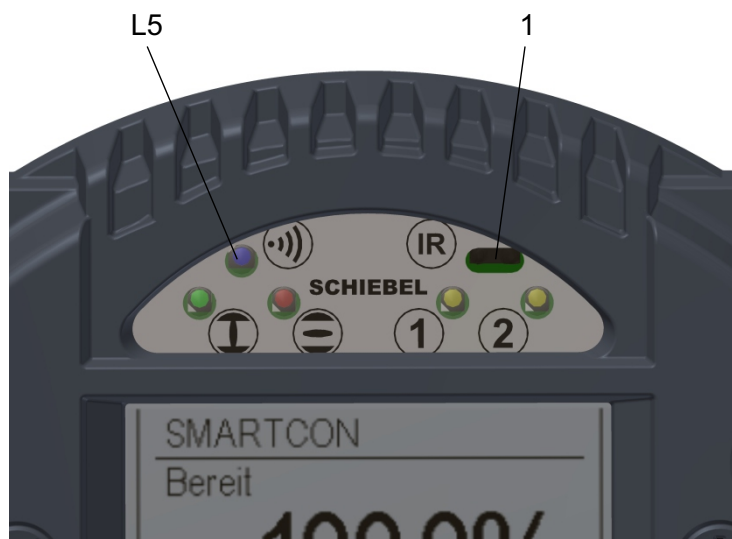


Figure 66: 1... Infrared connection

10 Bluetooth connection

In addition to the infrared interface, it is also possible to configure the Control System using a Bluetooth interface. Software required for Android equipment is available as an option.

In addition to communication with the actuator, the Android software also enables management of multiple actuators, allowing easy transfer of parameter sets to various actuators.

This approach can significantly simplify commissioning.

When the Bluetooth interface is enabled, this is indicated by LED L5 (see Figure 66 resp. section 6.2.2, page 17). The Bluetooth interface can be enabled in menu item P20.6.

11 Maintenance

Maintenance work on open actuators may only be conducted if these are de-energized. Reconnection during maintenance is strictly prohibited.

Work on the electrical system or equipment must be carried out only in accordance with electrical regulations by a qualified electrician himself or by specially instructed personnel under the control and supervision of a qualified electrician.



For explosion-proof actuators, it is necessary before opening the cover to wait a certain time after switching off, see explosion protection sticker (Picture 67). Following times are specified for the actuators.



- CM03: 5 min
- CM06: 10 min



Figure 67: 1... Explosion protection sticker

Actuators are ready for use after installation. By default, the actuator is delivered filled with oil.

On-going monitoring:

- Beware of increased running noise. During long downtime periods, operate the actuator at least every 3 months.
- For actuators with output types A, B and C according to DIN 3210-A, B1, B2 and C according to DIN ISO 5210, re-lubricate at least every 6 months on existing grease fittings (see section 15.3, page 47).

Actuators are designed for installation in any position (see section 2.5, page 5). Therefore, the main body is not equipped with a level indication or a drain plug.

The replacement of the lubricant from the main body must be performed via the handwheel.

Every approx. 10,000 to 20,000 hours (about 5 years, see section 15, page 46), depending on the workload, you must:

- change oil, and
- replace seals.

Check all roller bearings and the worm-wheel assembly and replace if necessary.
Check our lubricants table for recommended oils and greases (see section 15, page 46).

Check the cable glands at regular intervals (annually) for tightness of the cables and retighten if necessary.



If the visual inspection (eg. dust or water penetration) indicates that the effectiveness of the sealing elements of the cable entry has suffered damage or aging, such elements have to be replaced preferably by using the original spare parts from the manufacturer of the equipment or through cable entries of comparable quality as well as the same ex- or IP protection class.

If screws need to be replaced, it is preferable to use original replacement parts. The tensile strength of the screws must be at least 400 N/mm² !

12 Troubleshooting

Upon warning or error, the bottom line of the display will show the corresponding plain text description. This event will also be entered into the history (see section 8.2, page 42).

12.1 Error list

CAUTION: Each error has a unique error number. Each error also has its separate “OK” message in the history after the fault has gone.



Error	Description
#3: Mot. temp. warn. #19: Mot. temp. warn. OK	The motor temperature is in the critical range although the actuator remains fully functional.
#4: Mot. temp. trip. #20: Mot. temp. OK	Overtemp in motor, fault on Basis or BLDC, On Basis: loss of main power (3x400V) or cable break between CSC and motor; on BLDC: cable break between BLDC and motor.
#5: Phase sequ. error #6: Phase sequ. OK	Cause on Basis: Active phase sequence detection on single phase actuators, loss of main power while connected to external 24 VDC auxiliary voltage, or loss of phase L2.
#7: Ready	Written to the history after all errors are gone.
#8: Power On	Is written to the history after power on the actuator, even if there are some errors.
#9: Power supply error #21: Power supply OK	No power supply to the power electronics (when the controller is powered from the auxiliary power input). Defect of power electronics – please contact the manufacturer.
#11: Failsafe error #12: Failsafe OK	Communication error between Failsafe board and Logic, loss of external 24 V Failsafe Voltage, or overtemp. on Failsafe brake.
#13: Manual override #14: Manual override off	Manual override on Failsafe activate (visible in status S4), cable/switch broken.
#17: Travel error #18: Travel OK	The travel unit is outside the permitted range (potentiometer fault on Basis), cable broken, or multiturnsensor calibration lost on CM – please contact the manufacturer.
#22: Torque error #23: Torque OK	Potentiometer fault on Basis, or cable broken.
#24: Bus error #25: Bus OK	No communication with the optional bus system.
#26: Bus Watchdog #27: Bus Watchdog OK	Watchdog for bus communication has reacted.
#28: Undervoltage> Warning #29: Voltage OK	The input voltage is below the regular voltage range, but motor operation is still possible.
#32: Internal Comm.L> error #33 Internal Comm.L> OK	Communication error between Logik and Basis/BLDC, cable broken between boards, or board defect.
#34: Internal Comm.D> error #35: Internal Comm.D> OK	Communication error between Display and Logik, cable broken between boards, boards defect, or firmware update on Logik not properly done.
#36: Failsafe not ready #37: Failsafe ready	Failsafe voltage OK and Failsafe not initialized (LUS not tensioned).
#38: Battery low #39: Battery OK	Battery on Display board is empty, loss of time/date or counter values possible.
#44: Inverter error Para #45 Inverter OK Para	BLDC parameter error.
#46: Analog Input 1 Failure #47: Analog Input 1 OK	SRG active, Positioner live zero detection activated, no setpoint value recognized.
#48: Analog Input 2 Failure #49: Analog Input 2 OK	Ext. setpoint active, Ext. setpoint live zero detection activated, no Ext. setpoint value recognized

Error	Description
#56: Internal Comm.E> error #57: Internal Comm.E> OK	Communication error between Logik and Failsafe (external connection) – please contact the manufacturer.
#58: Undervoltage> Warning	The input voltage is too low. The motor is switched off, until the input voltage is in the regular voltage range.
#59: Undervoltage> Switchoff	The input voltage dropped below the lower threshold multiple times. The motor is turned off for 5 minutes. This error can be acknowledged by switching the selector switch to OFF or by turning the actuator off and on.
#60: Overvoltage> Warning	The input voltage is over the regular voltage range, but motor operation is still possible.

Errors in case of special types

Error	Description
#30: Oil level low #31: Oil level OK	Binary input on Basis board or switch faulty.
#40: Oil pressure low #41: Oil pressure OK	Analog input (4...20 mA) on Basis board faulty.
#42: Motor protection #43 Motor protection OK	Binary input on Basis board or switch faulty.

13 Fuses

The Logik board of the controller cover (see Figure 68, page 46) features two miniature fuses for the control lines.

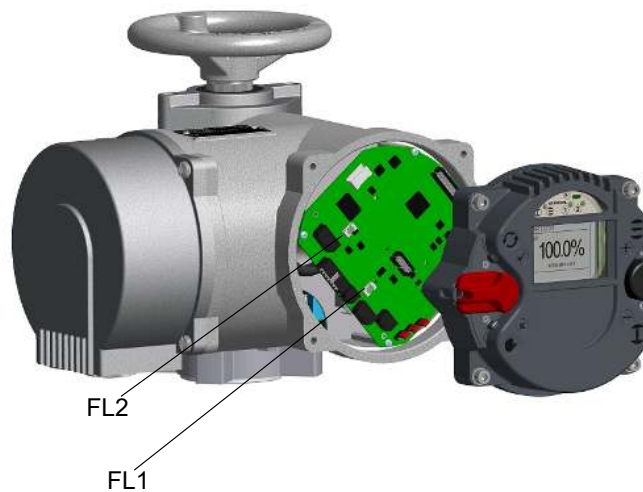


Figure 68: FL1... fuse for auxiliary supply, FL2... fuse for the binary outputs

Fuses on the logic board

Fuse	Value	Manufacturer	No. of spare parts
FL1	1AT	Littelfuse 454 NANO ² Slo-Blo [®] slow	FUSE-F1
FL2	4AT	Littelfuse 454 NANO ² Slo-Blo [®] slow	FUSE-F2

The frequency inverter is protected by an input fuse and the explosion-proof version also has a thermal fuse (see section 2.7.3, page 6).



14 Spare parts

When ordering spare parts, please provide us with the serial number of the actuator (see section 2.2, page 4). Check the separate break-down image and separate list of spare parts.

15 Lubricant recommendation, lubricant requirements

Please note, that safety precautions such as the use of personal protective equipment (PPA) may have to be followed! Please consult the safety datasheet (in section 8) of the product in question.



15.1 Main body: -25 to +60°C

Operating oil: DIN 51 517-CLP-HC

i.e. fully synthetic high-performance gear oils based on poly-alpha-olefins (PAO)
 Viscosity class: 320 ISO VG
 Pourpoint: < -39°C (according DIN ISO 3016)
 Lubricant requirement CM03: 200... 250 ml
 Lubricant requirement CM06: 300... 350 ml

15.2 Main body: -40 to +60°C

Operating oil: DIN 51 517-CLP-HC

i.e. fully synthetic high-performance gear oils based on poly-alpha-olefins (PAO)
 Viscosity class: 68 ISO VG
 Pourpoint: < -54°C (according DIN ISO 3016)
 Lubricant requirement CM03: 200... 250 ml
 Lubricant requirement CM06: 300... 350 ml

15.3 Output type A and spindle drives (linear actuators) -40 to +60°C

Grease DIN 51825-K(P) R -40

i.e. water repellent complex grease on Al-soap base with high resistance to acids and alkalis
 Penetration 0.1 mm: 310 -340
 Dropping point: about 260°C
 NLGI No.: 1
 acid-free, little or not water-reactive

15.4 Basic lubricant service interval

Schiebel actuators must be serviced 10 years after delivery by SCHIEBEL Antriebstechnik GmbH, A-1230 Vienna. The functionality and durability of the lubricant is however contingent upon the operating conditions. Where applicable, reduction factors must be considered.



Operating condition (s)	Definition	Reduction factor (multiplier)
Duty time DT	(Total engine running time)	
Extremely high DT	over 1250 hours/year	0.5
High DT	over 500 hours/year	0.7
Extremely low DT	less than 0.5 hours/year	0.8
Ambient temperature	(permanent or long-term)	
Extremely changeable	between -10 and +50°C	0.5
Extremely high	above +50°C	0.7
Extremely low	below -25°C	0.9
Output speed	(on actuator main shaft)	
High speed	over 80 rpm	0.8
Utilisation	(relative to rated power)	
Very high	over 90%	0.8
High	between 80 and 90%	0.9

Application example:

Extremely low DT + extremely low ambient temperature + high speed + 87% utilization

*⇒ 0.8 * 0.9 * 0.8 * 0.9 = 0.51 reduction factor*

*Lubrication maintenance interval ⇒ 10 years * 0.51 = 5.1 years (62 months).*

CAUTION: This calculated maintenance interval does neither apply to the maintenance of output type A (threated bushing) units nor to the maintenance of linear and spindle drive units. These units must be periodically lubricated (at least every 6 months) via the grease nipples (see section 15.3)!



During maintenance of our actuators, remove and replace old grease with new one. **Mixing of different lubricant types is NOT permitted.**

Quantities needed for lubricant service are listed in section 15, page 46.

16 Training

CAUTION: If you experience problems during installation or upon adjustments on site, please contact SCHIEBEL, Vienna at +43 (1) 66 108 or via the Internet at www.schiebel-actuators.com to prevent any operational errors or damage to the actuators. Schiebel recommends engaging only qualified personnel for installation of Schiebel actuators. Upon special request of the client, SCHIEBEL can conduct training on the activities listed in this operating manual at the factory of SCHIEBEL.



17 Original Declaration of Incorporation of Partly Completed Machinery

According Machinery Directive 2006/42/EC (Annex II, sub. B)

The manufacturer, the company:

SCHIEBEL Antriebstechnik Gesellschaft m.b.H.
Josef-Benc-Gasse 4
A-1230 Vienna

hereby declares that for the partly completed machinery described below:

Electric actuators series:

CM	rCM	exCM	exrCM
----	-----	------	-------

the following basic requirements of the Machinery Directive (2006/42/EC) are applied and fulfilled:

Annex I,	articles	1.1.2, 1.1.3, 1.1.5; 1.2.1, 1.2.1, 1.2.2, 1.2.6; 1.3.1, 1.3.2, 1.3.7; 1.5.1; 1.6.3; 1.7.1, 1.7.3, 1.7.4	
----------	----------	---	--

The following European harmonized standards have been applied:

EN 12100:2010			
EN ISO 5210:1996	EN ISO 5211:2001	DIN 3358:1982	

The relevant technical documentation for partly completed machinery referred to in Annex VII, Part B has been prepared. The manufacturer commits to electronically submitting the documents for the incomplete machine to the competent national authority upon request.

For the preparation of the technical documents is authorized:

Head of mechanical Engineering
Schiebel Antriebstechnik Gesellschaft m.b.H.
Josef-Benc-Gasse 4
A-1230 Vienna

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC, where appropriate.

The electric actuators as partly completed machinery are in conformity with the relevant regulations of the EU directives:

Directive 2014/30/EU ("EMV-Directive")
Directive 2014/35/EU ("Low voltage directive")
Directive 2014/34/EU ("ATEX-Directive") for correspondingly marked devices

The corresponding separate EC Declarations of Conformity are valid.

Vienna,
(location)

13th March 2018
(date)



.....
(Klaus Schiebel, general manager)

18 Declaration of Conformity

(EMV directive and Low voltage directive)

The producer:

SCHIEBEL Antriebstechnik Gesellschaft m.b.H.
Josef-Benc-Gasse 4
A-1230 Wien

herewith confirms that the equipment

electric actuators with integrated control unit model Actusmart and following types

- (r) CM03
- (r) CM03 FS
- (r) CM06
- (r) CM06 FS

meets the requirement of the EC directive:

2014/30/EU („EMV directive“)

and complies with the following harmonised standards in the version valid at signature date:

EN 61000-6-2:2005

EN 61000-6-4:2014

and are also consistent with the EC directive:

2014/35/EU („Low voltage directive“)

in consideration of the respective operating instructions, and the fulfilment of the Directive has been demonstrated by the following standards:

IEC 60204-1:2005 + A1:2008

EN 60529:1991 + A1:2000

Vienna,
(location)

14.2.2018
(date)



.....
(Klaus Schiebel, general manager)

19 Declaration of Conformity

(Ex directive, EMV directive and Low voltage directive)

The producer:

SCHIEBEL Antriebstechnik Gesellschaft m.b.H.
Josef-Benc-Gasse 4
A-1230 Wien

herewith confirms that the equipment

electric actuators with integrated control unit model Actusmart and following types

Type ex (r) CM03	⊕II 2 G Ex db eb (mb) II C T4(T6) Gb	TÜV-A13ATEX0006X
Type ex (r) CM03 FS	⊕II 2 G Ex db eb (mb) II C T4(T6) Gb	TÜV-A13ATEX0006X
Type ex (r) CM06	⊕II 2 G Ex db eb (mb) II C T4(T6) Gb	TÜV-A13ATEX0006X
Type ex (r) CM06 FS	⊕II 2 G Ex db eb (mb) II C T4(T6) Gb	TÜV-A13ATEX0006X

meets the requirement of the EC directive:

2014/34/EU

EC Directive for Operation of Equipment in Potentially Explosive Atmospheres

and complies with the following harmonised standards in the version valid at signature date:

EN 60079-0:2012

EN 60079-1:2014

EN 60079-7:2015

EN ISO 80079-36:2016

EN ISO 80079-37:2016

For the above listed actuators, a type examination certificate TÜV A13ATEX0006X, issued by TÜV Austria Services GMBH, is available.

TÜV Austria Services GmbH

A-1230 Wien

NB 0408: Type examination certification

FTZU

CZ-716 07 Ostrava Radvanice

NB 1026: Quality system

FTZU03ATEXQ019

Furthermore, they are consistent with the EC directive

2014/30/EU („EMV directive“)

in consideration of the respective operating instructions, and the fulfilment of the Directive has been demonstrated by the following standards:

EN 61000-6-2:2005

EN 61000-6-4:2014

and are also consistent with the EC-directive:

2014/35/EU („Low voltage directive“)

in consideration of the respective operating instructions, and the fulfilment of the Directive has been demonstrated by the following standards:

IEC 60204-1:2005 + A1:2008

EN 60529:1991 + A1:2000

Vienna,
(location)

14.2.2018
(date)



.....
(Klaus Schiebel, general manager)

20 Technical data

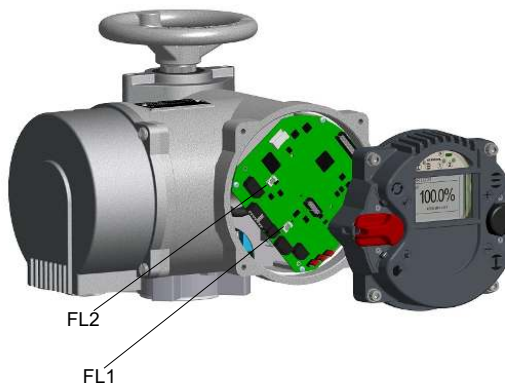


Figure 69: Control unit

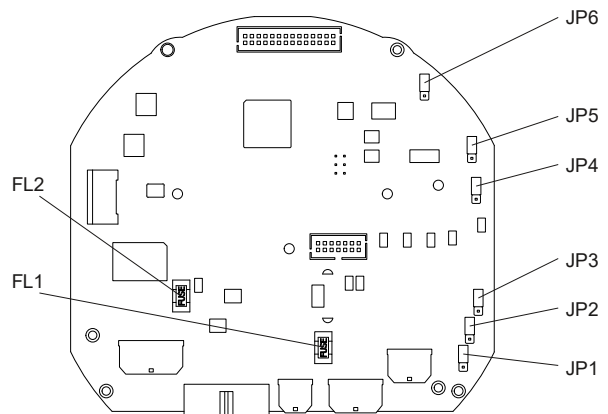


Figure 70: Logik board

20.1 Binary outputs

Count:	8
Power supply:	24 VDC nominal range: 11...35 VDC (either from internal or external)
Max voltage drop at set output:	1 V
Output voltage at non-set output:	<1 V
Maximum current per output:	500 mA (short circuit proof)
Maximum permissible total current for all outputs:	4 A
Fuse (Fuse FL2, see Figure 70, page 52):	4 A slow (Littelfuse 454 NANO ² Slo-Blo [®])

Binary outputs with external supply are separated from other controllers via optocouplers.

20.2 Binary inputs

Count:	5
Nominal voltage:	24 VDC towards common ground
Voltage for input set:	>10 V (8.5 V typ.)
Voltage for input not set:	<7 V (8.5 V typ.)
Maximum voltage:	30 VDC
Current consumption at 24 VDC:	10.5 mA typ.

Binary inputs are separated from other controllers via optocouplers.

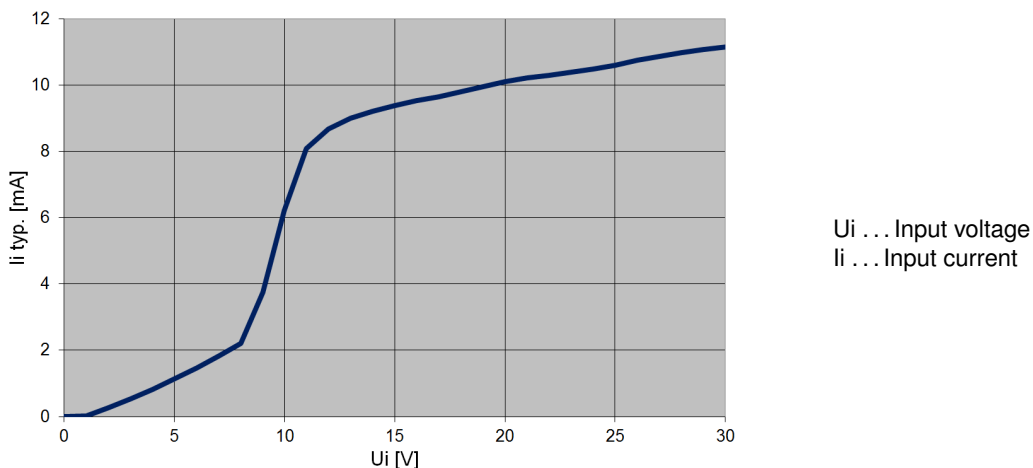


Figure 71: Binary inputs, input characteristic

Jumpers JP1 ... JP3 can be used to interconnect the binary inputs to groups with separate earths:

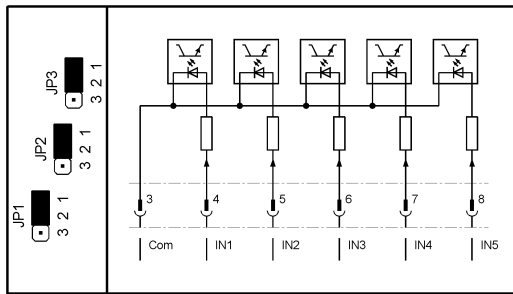


Figure 72: 5 inputs with same common

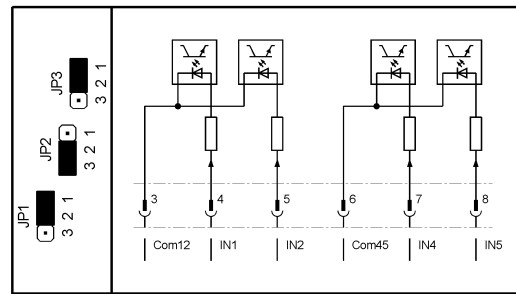


Figure 73: 2 separated groups of 2 inputs with same ground
 Input IN3 is disabled.

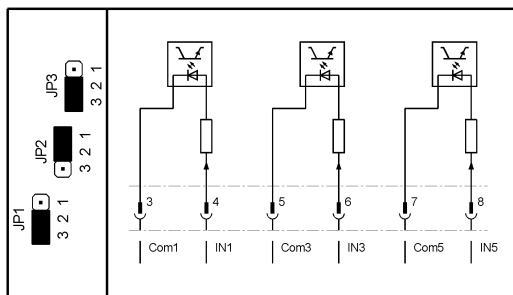


Figure 74: 3 separated inputs
 Inputs IN2 and IN4 are disabled.

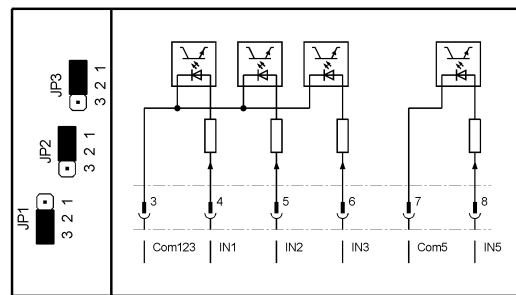


Figure 75: 3 inputs with same common and 1 separated input.
 Input IN4 is disabled.

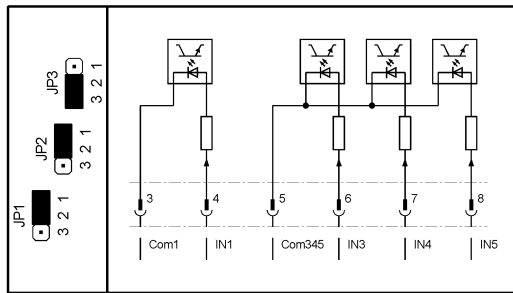


Figure 76: 1 separated input and 3 inputs with same common.
 Input IN2 is disabled.

Examples:

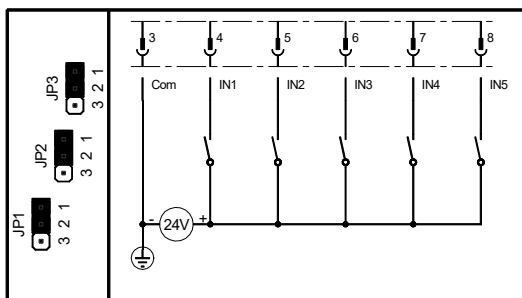


Figure 77: 5 inputs with common = "-" using external 24V

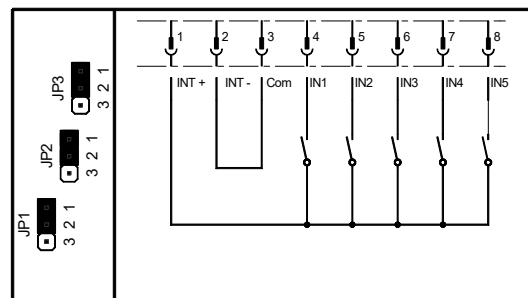


Figure 78: 5 inputs with common = "-" using internal 24V
 (e.g. for dry contacts)

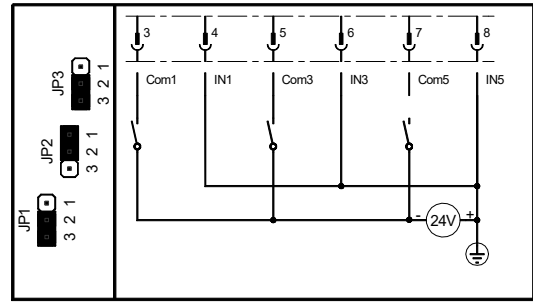
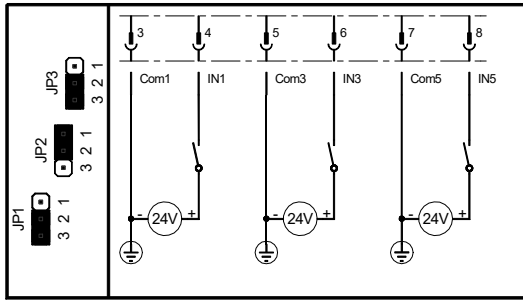


Figure 79: 3 separated inputs using 3 separated external 24V

Figure 80: 3 separated inputs with common = "+" using external 24V

20.3 Analog inputs

Input 1: setpoint value

Current range: 0... 25 mA
Resolution: 14 bit
Accuracy: 0.5%
Input resistance: 60 Ω

Analog input 1 is electrically isolated from the rest of the electronic system.

Input 2: External actual value (only in combination with PID controller)

Current range: 0... 20.8 mA
Resolution: 12 bit
Accuracy: 0.5%
Input resistance: 120 Ω

Jumper JP6 can be used to switch analog input 2 from a passive input (default) to an input with internal 24 V power supply (for 4... 20 mA, two-wire transmitters).

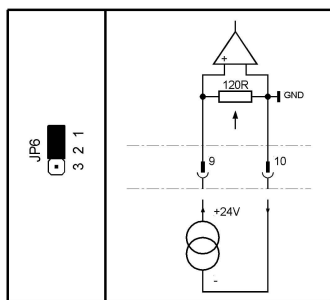


Figure 81: Passive input (default)

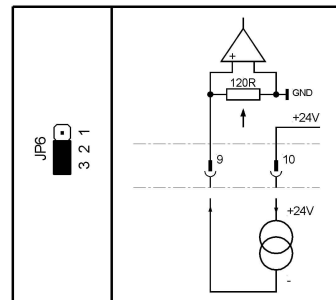


Figure 82: Input with internal supply (active input)

IMPORTANT: The analog input 2 is referenced to common of the electronic system and the auxiliary power supply (see section 20.5).



20.4 Analog output

Current range: 0... 20.8 mA
Resolution: 12 bit
Accuracy: 0.5%
Max load: 600 Ω

The analog output is galvanically isolated from the rest of the electronic system.

Jumper JP4 can be used to switch the analog output from an active power source (default) to a current sink, allowing the output to simulate a 4... 20 mA, two-wire transmitter.

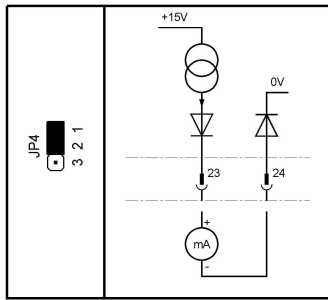


Figure 83: Current source

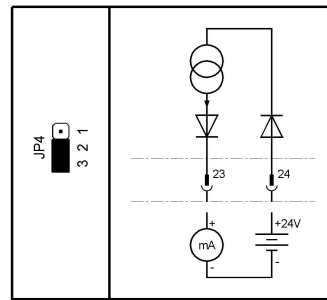


Figure 84: Current sink

Ground potential is the potential of the control unit and the auxiliary supply (see chapter 20.5).

20.5 Auxiliary voltage input and output

Input voltage range (auxiliary voltage input):	20... 30 VDC
Maximum current consumption (auxiliary voltage input):	500 mA
Maximum current consumption in power-save mode (auxiliary voltage input):	120 mA
Output voltage (auxiliary voltage output):	typ. 23 V
Maximum output current (auxiliary voltage output):	200 mA
Resistance of common ground vs. earth:	typ. 500 kΩ
Resistance of common ground vs. earth (floating version):	> 10 MΩ
Capacitance of common ground vs. earth:	typ. 100 nF
Maximum allowed voltage of common ground vs. earth:	max. 40 Vs
Fuse (Fuse FL1, see picture 70, page 52):	1 A slow (Littelfuse 454 NANO ² Slo-Blo [®])

Ground potential is the common ground of the controller and the analog inputs and outputs.
 The auxiliary voltage output can be set in menu P6.5 (see section 7.5, page 25).

The power-save mode is defined as follows:

- No power supply (the controller is powered exclusively through the 24 V auxiliary voltage input).
- The backlight of the LCD display switches off automatically.
- No additional hardware options included (Profibus Interface, DeviceNet interface, relay board, etc...).
- Binary outputs and the mA output are not enabled; when activating, the respective currents must be added to the total current consumption.

20.6 Connections

20.6.1 Connections for non explosion-proof version

Power/motor:	Industrial plug with 6 pins Screw connection 16 A, max. 2.5 mm ² , AWG14
Control signals:	Industrial plug with 24 pins Screw connection 16 A, max. 2.5 mm ² , AWG14

Optionally, contacts are available in crimp or cage clamp designs.

20.6.2 Connections for explosion-proof version

Power/motor:	terminals with screw connection 16 A, 0.5... 4 mm ² , AWG20... AWG12
Control signals:	terminals with screw connection 4 A, 0.5... 2.5 mm ² , AWG20... AWG14

20.7 Miscellaneous

Ambient temperature:	
non explosion-proof version:	-25 ... +60°C
explosion-proof version:	-20 ... +40°C (according EN 60079-0)
ex version with extended temperature range:	-40 ... +60°C
Protection according to EN 60529:	IP67
Standard colour:	RAL7024

21 Technical data CM03

The motor (brushless DC motor) is controlled via integrated power electronics, which also provide the supply voltage for the controller.

21.1 Standard version CM03

Output torque:	max. 32 Nm
Average permissible output torque:	max. 16 Nm
Setting range of tripping torque:	8 ... 32 Nm
Setting range of output speed:	2.5 ... 72.2 min ⁻¹
Travel range:	max. 100 revs
Reduction ratio handwheel:	2,5
Output resolution:	about 0.25°
Supply voltage range AC:	90 ... 240 Vrms +/-10%, 50/60 Hz
Supply voltage range DC:	100 ... 220 V +/-10%
Nominal current (16 Nm / 72,2 min ⁻¹):	1.47 A / 230 VAC
Idle power consumption:	12 W typ., 24 W max.
Weight:	11.5 daN

21.2 24 VDC version CM03

Output torque:	max. 32 Nm (output speed 5 min ⁻¹) max. 10 Nm (output speed 20 min ⁻¹)
Average permissible output torque:	max. 16 Nm
Setting range of tripping torque:	8 ... 32 Nm
Setting range of output speed:	2.5 ... 20 min ⁻¹
Supply voltage range:	24 VDC +/-10%
Nominal current (10Nm / 20U/min):	4.6 A
Idle power consumption:	6 W typ., 18 W max.
all other dates see output data - standard version	

21.3 400 V version CM03

Output torque:	max. 32 Nm
Average permissible output torque:	max. 16 Nm
Setting range of tripping torque:	8 ... 32 Nm
Setting range of output speed:	2.5 ... 72.2 min ⁻¹
Travel range:	max. 100 revs
Output resolution:	about 0.25°
Supply voltage range AC:	3 x 380... 480 VAC +/-10%, 50/60 Hz
Nominal current (16 Nm / 72.2 rpm):	0.46 A / 3 x 400 VAC
Weight:	11.5 daN

Idle power consumption is measured with an idle motor and is dependent on the existing hardware options.

22 Technical data CM06

The motor (brushless DC motor) is controlled via integrated power electronics, which also provide the supply voltage for the controller.

22.1 Standard version CM06

Output torque:	max. 64 Nm
Average permissible output torque:	max. 20 Nm
Setting range of tripping torque:	16 ... 64 Nm
Setting range of output speed:	2.5 ... 64 min ⁻¹
Travel range:	max. 100 revs / 300 revs
Reduction ratio handwheel:	2,5
Output resolution:	about 0.25° / 0.75°
Supply voltage range AC:	90 ... 240 Vrms +/-10%, 50/60 Hz
Supply voltage range DC:	100 ... 220 V +/-10%
Nominal current (20 Nm / 60min ⁻¹):	2.17 A / 230 VAC
Idle power consumption:	12 W typ., 24 W max.
Weight:	15.5 daN



22.2 400V version CM06

Output torque:	max. 64 Nm
Average permissible output torque:	max. 20 Nm
Setting range of tripping torque:	16 ... 64 Nm
Setting range of output speed:	2.5 ... 64 min ⁻¹
Travel range:	max. 100 revs / 300 revs
Output resolution:	about 0.25° / 0.75°
Supply voltage range AC:	3 x 380... 480 VAC +/-10%, 50/60 Hz
Nominal current (32 Nm / 60min ⁻¹):	0.9 A / 3 x 400 VAC
Weight:	15.5 daN



Idle power consumption is measured with an idle motor and is dependent on the existing hardware options.

Spare parts ACTUSMART CM03.V1.2

1 Standard version

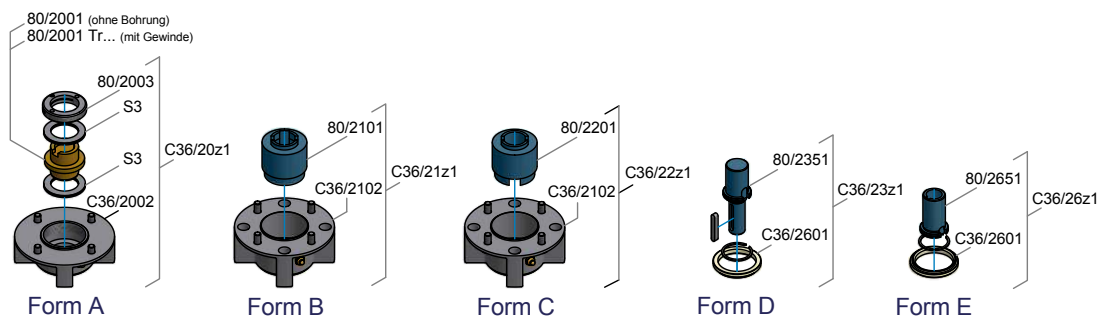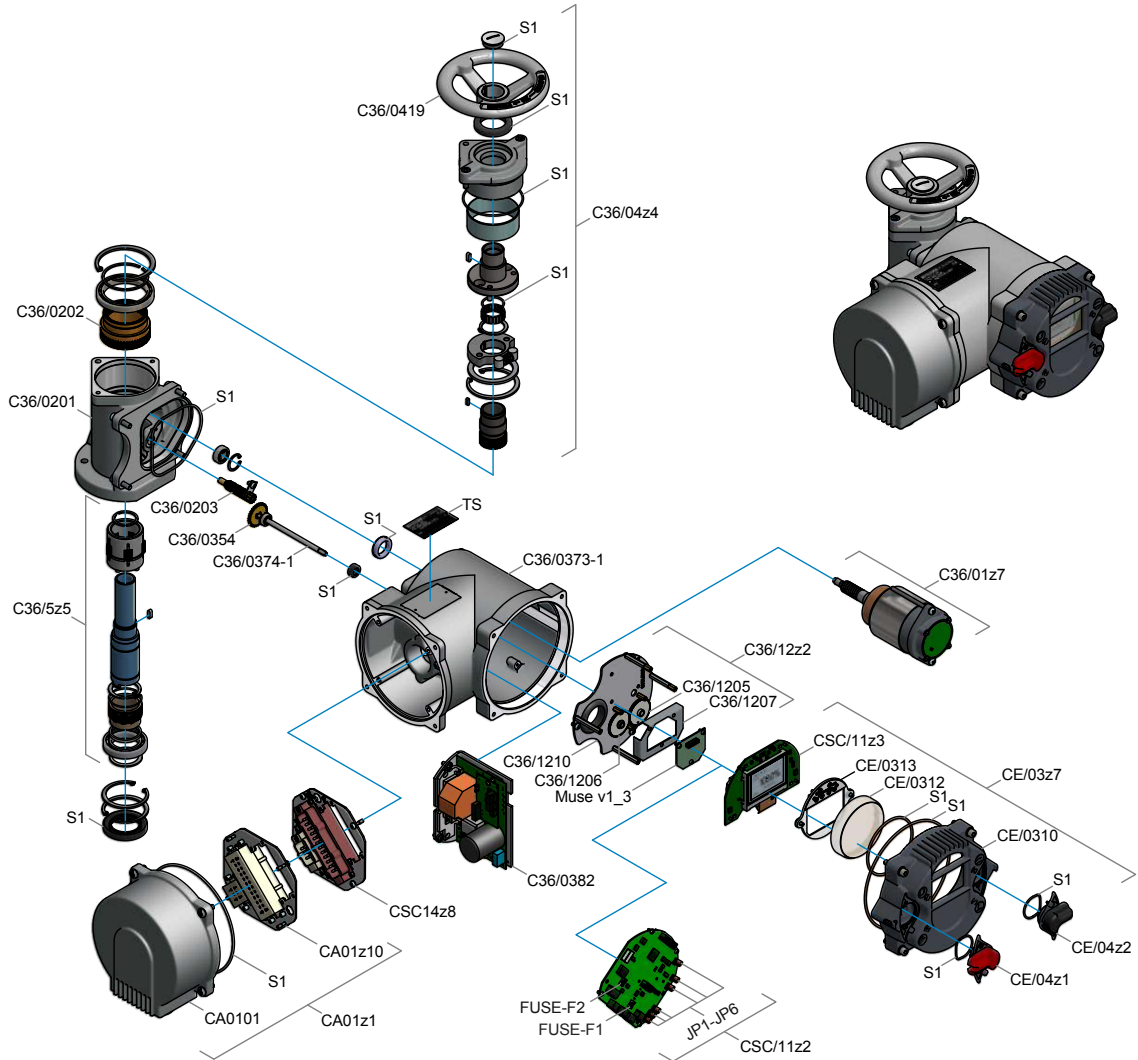

2 Explosion-proof version

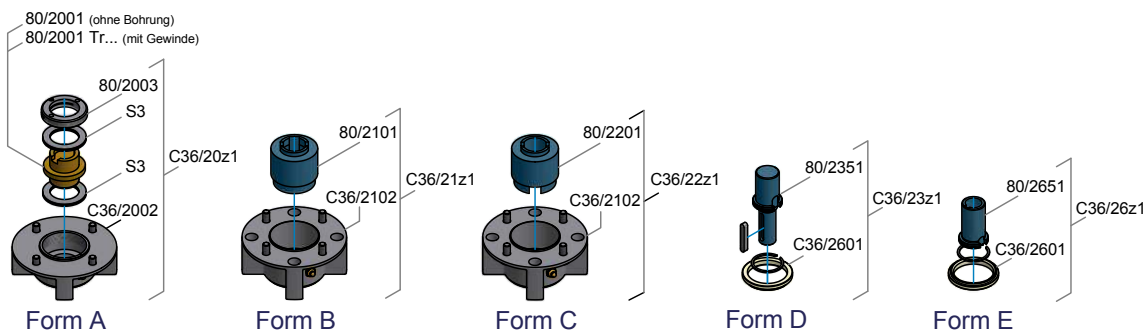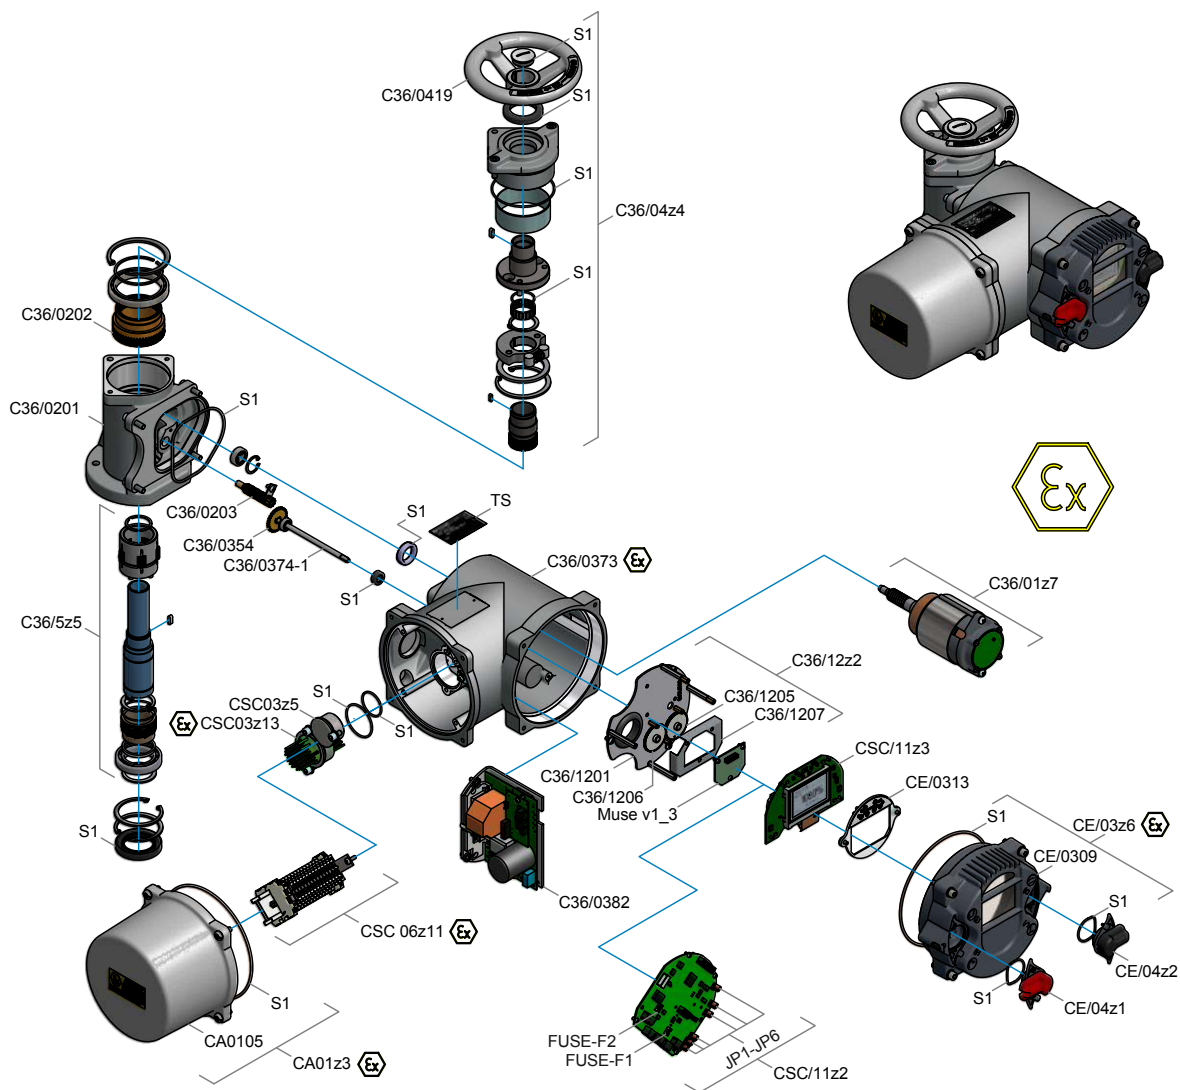

CAUTION: When ordering spare parts, you **must** provide the **serial number** (see type shield or status menu S6).

Use only original spare parts supplied by SCHIEBEL. Using other parts will render the warranty void. Illustrations may differ from actual spare parts.



No.	Description
CA01z1	Assembly A-Cover
CA01z10	Assembly insertable plate A-Cover-side
CA01z3	Assembly ex-A-cover
CE/03z6	Assembly ex-E-cover exCM with Display
CE/03z6o	Assembly ex-E-cover exCM
CE/03z7	Assembly E-cover CM with display
CE/03z7o	Assembly E-cover CM
CE04z1	Assembly switch red
CE04z2	Assembly switch black
CSC03z5	Dummy bushing LD34
CSC03z13	Cable bushing LD44
CSC06z11	Assembly ex-terminals
CSC/11z2	Logic
CSC/11z3	Display
CSC14z8	Assembly CM insertable plate actuator side
C36/01z7	Assembly motor
C36/0201	Housing CM03
C36/0202	Worm-wheel
C36/0203	Helical pinion
C36/0354	Gear
C36/0373	Housing-E exCM03
C36/0373-1	Housing-E CM03
C36/0374-1	Sensorshaft CM03
C36/0382	Assembly inverter
C36/12z2	Assembly partition with sensor
C36/12z2o	Assembly partition
C36/04z4	Assembly hand wheel CM03
C36/0419	hand wheel CM03
C36/05z5	Assembly spindle CM03
....	Assembly ball-bearing
FUSE-F1	Littelfuse 454 1A slow-blow
FUSE-F2	Littelfuse 454 4A slow-blow
Muse V1.3	Multiturnsensor
C304-1	Profibusprint DP1 1-channel
C304-2	Profibusprint DP2 2-channels
C314-1	Profibus connection board DP1 1-channel
C314-2	Profibus connection board DP2 2-channels

No.	Description
C503	Nose cap M25x1.5
C503ex	ex-Nose cap M25x1.5
C601	Mounting plate for plugs control unit
C602	Plug Han24E male for signals control unit
C603	Plug Han6E male for power supply control unit
C608	Plug Profibus male control unit
C609	Frame for Plug Profibus control unit
C701	Mounting plate for plug customer site
C702	Plug Han24E female for signals customer site
C703	Plug Han6E female for power supply customer site
C708	Plug Profibus female customer site
C709	Frame for Plug Profibus customer site
80/2000	Spindle nut without thread
80/2001	Spindle nut with thread
80/2003	Ring nut
80/2004	Axial bearing set
80/2101	Socket "B"
80/2201	Claw coupling "C"
80/2351	Output shaft "D"
80/2651	Output shaft "E"
C36/2002	Flange type "A" and "Am"
C36/20z0	Assembly Output "A"
C36/20z1	Assembly Output "Am" - Spindle nut drilled
C36/2102	Flange type "B" and "C"
C36/21z1	Assembly Output "B"
C36/22z1	Assembly Output "C"
C36/23z1	Assembly Output "D"
C36/2601	Centring ring F07
C36/26z1	Assembly Output "E"
TS	Type label
S1	Sealing set
S2	Bearing set

SCHIEBEL
www.schiebel-actuators.com

SCHIEBEL Antriebstechnik
Gesellschaft m.b.H.
Josef-Benc-Gasse 4
A-1230 Wien
Tel.: +43 1 66 108 - 0
Fax: +43 1 66 108 - 4
info@schiebel-actuators.com
www.schiebel-actuators.com